

FLUID MECHANICS FOR CHEMICAL ENGINEERS

WITH MICROFLUIDICS, CFD,
AND COMSOL MULTIPHYSICS 5

THIRD EDITION

JAMES O. WILKES



PRENTICE HALL INTERNATIONAL SERIES IN THE
PHYSICAL AND CHEMICAL ENGINEERING SCIENCES



FREE SAMPLE CHAPTER

SHARE WITH OTHERS



Fluid Mechanics for Chemical Engineers

Third Edition

**with Microfluidics, CFD,
and COMSOL Multiphysics 5**

This page intentionally left blank

FLUID MECHANICS FOR CHEMICAL ENGINEERS

Third Edition, with Microfluidics, CFD,
and COMSOL Multiphysics 5

JAMES O. WILKES

Department of Chemical Engineering
The University of Michigan, Ann Arbor, MI

with contributions by

STACY G. BIRMINGHAM: *Non-Newtonian Flow*

Albert A. Hopeman Jr. School of Science,
Engineering & Math, Grove City College, PA

KEVIN R.J. ELLWOOD: *Multiphysics Modeling*

Research & Innovation, Ford Motor Company, Dearborn, MI

BRIAN J. KIRBY: *Microfluidics*

Sibley School of Mechanical and Aerospace Engineering
Cornell University, Ithaca, NY

COMSOL MULTIPHYSICS: *Multiphysics Modeling*

COMSOL, Inc., Burlington, MA

CHI-YANG CHENG: *Computational Fluid Dynamics and Fluent*

ANSYS, Inc., Lebanon, NH, and Dartmouth College, Hanover, NH

Boston • Columbus • Indianapolis • New York • San Francisco • Amsterdam • Cape Town
Dubai • London • Madrid • Milan • Munich • Paris • Montreal • Toronto • Delhi
Mexico City • São Paulo • Sydney • Hong Kong • Seoul • Singapore • Taipei • Tokyo

Many of the designations used by manufacturers and sellers to distinguish their products are claimed as trademarks. Where those designations appear in this book, and the publisher was aware of a trademark claim, the designations have been printed with initial capital letters or in all capitals.

The author and publisher have taken care in the preparation of this book, but make no expressed or implied warranty of any kind and assume no responsibility for errors or omissions. No liability is assumed for incidental or consequential damages in connection with or arising out of the use of the information or programs contained herein.

For information about buying this title in bulk quantities, or for special sales opportunities (which may include electronic versions; custom cover designs; and content particular to your business, training goals, marketing focus, or branding interests), please contact our corporate sales department at corpsales@pearsoned.com or (800) 382-3419.

For government sales inquiries, please contact governmentsales@pearsoned.com.

For questions about sales outside the U.S., please contact intlcs@pearson.com.

Visit us on the Web: informit.com

Library of Congress Control Number: 2017941599

Copyright © 2018 Pearson Education, Inc.

All rights reserved. Printed in the United States of America. This publication is protected by copyright, and permission must be obtained from the publisher prior to any prohibited reproduction, storage in a retrieval system, or transmission in any form or by any means, electronic, mechanical, photocopying, recording, or likewise. For information regarding permissions, request forms and the appropriate contacts within the Pearson Education Global Rights & Permissions Department, please visit www.pearsoned.com/permissions/.

ISBN-13: 978-0-13-471282-6

ISBN-10: 0-13-471282-X

Dedicated to the memory of

Terence Robert Corelli Fox

*Shell Professor of Chemical Engineering
University of Cambridge, 1946–1959*

This page intentionally left blank

CONTENTS

PREFACE

xv

PART I—MACROSCOPIC FLUID MECHANICS

CHAPTER 1—INTRODUCTION TO FLUID MECHANICS

1.1	Fluid Mechanics in Chemical Engineering	3
1.2	General Concepts of a Fluid	3
1.3	Stresses, Pressure, Velocity, and the Basic Laws	5
1.4	Physical Properties—Density, Viscosity, and Surface Tension	10
1.5	Units and Systems of Units	21
	Example 1.1—Units Conversion	24
	Example 1.2—Mass of Air in a Room	25
1.6	Hydrostatics	26
	Example 1.3—Pressure in an Oil Storage Tank	29
	Example 1.4—Multiple Fluid Hydrostatics	30
	Example 1.5—Pressure Variations in a Gas	31
	Example 1.6—Hydrostatic Force on a Curved Surface	35
	Example 1.7—Application of Archimedes' Law	37
1.7	Pressure Change Caused by Rotation	39
	Example 1.8—Overflow from a Spinning Container	40
	Problems for Chapter 1	42

CHAPTER 2—MASS, ENERGY, AND MOMENTUM BALANCES

2.1	General Conservation Laws	55
2.2	Mass Balances	57
	Example 2.1—Mass Balance for Tank Evacuation	58
2.3	Energy Balances	61
	Example 2.2—Pumping <i>n</i> -Pentane	65
2.4	Bernoulli's Equation	67
2.5	Applications of Bernoulli's Equation	70
	Example 2.3—Tank Filling	76
2.6	Momentum Balances	78
	Example 2.4—Impinging Jet of Water	83
	Example 2.5—Velocity of Wave on Water	84
	Example 2.6—Flow Measurement by a Rotameter	89

2.7	Pressure, Velocity, and Flow Rate Measurement	92
	Problems for Chapter 2	96

CHAPTER 3—FLUID FRICTION IN PIPES

3.1	Introduction	120
3.2	Laminar Flow	123
	Example 3.1—Polymer Flow in a Pipeline	128
3.3	Models for Shear Stress	129
3.4	Piping and Pumping Problems	133
	Example 3.2—Unloading Oil from a Tanker	
	Specified Flow Rate and Diameter	142
	Example 3.3—Unloading Oil from a Tanker	
	Specified Diameter and Pressure Drop	144
	Example 3.4—Unloading Oil from a Tanker	
	Specified Flow Rate and Pressure Drop	147
	Example 3.5—Unloading Oil from a Tanker	
	Miscellaneous Additional Calculations	147
3.5	Flow in Noncircular Ducts	150
	Example 3.6—Flow in an Irrigation Ditch	152
3.6	Compressible Gas Flow in Pipelines	156
3.7	Compressible Flow in Nozzles	159
3.8	Complex Piping Systems	163
	Example 3.7—Solution of a Piping/Pumping Problem	165
	Problems for Chapter 3	168

CHAPTER 4—FLOW IN CHEMICAL ENGINEERING EQUIPMENT

4.1	Introduction	185
4.2	Pumps and Compressors	188
	Example 4.1—Pumps in Series and Parallel	193
4.3	Drag Force on Solid Particles in Fluids	194
	Example 4.2—Manufacture of Lead Shot	202
4.4	Flow Through Packed Beds	204
	Example 4.3—Pressure Drop in a Packed-Bed Reactor	208
4.5	Filtration	210
4.6	Fluidization	215
4.7	Dynamics of a Bubble-Cap Distillation Column	216
4.8	Cyclone Separators	219
4.9	Sedimentation	222
4.10	Dimensional Analysis	224
	Example 4.4—Thickness of the Laminar Sublayer	229
	Problems for Chapter 4	230

PART II—MICROSCOPIC FLUID MECHANICS

CHAPTER 5—DIFFERENTIAL EQUATIONS OF FLUID MECHANICS

5.1	Introduction to Vector Analysis	249
5.2	Vector Operations	250
	Example 5.1—The Gradient of a Scalar	253
	Example 5.2—The Divergence of a Vector	257
	Example 5.3—An Alternative to the Differential Element	257
	Example 5.4—The Curl of a Vector	262
	Example 5.5—The Laplacian of a Scalar	262
5.3	Other Coordinate Systems	263
5.4	The Convective Derivative	266
5.5	Differential Mass Balance	267
	Example 5.6—Physical Interpretation of the Net Rate of Mass Outflow	269
	Example 5.7—Alternative Derivation of the Continuity Equation	270
5.6	Differential Momentum Balances	271
5.7	Newtonian Stress Components in Cartesian Coordinates	274
	Example 5.8—Constant-Viscosity Momentum Balances in Terms of Velocity Gradients	280
	Example 5.9—Vector Form of Variable-Viscosity Momentum Balance	284
	Problems for Chapter 5	285

CHAPTER 6—SOLUTION OF VISCOUS-FLOW PROBLEMS

6.1	Introduction	292
6.2	Solution of the Equations of Motion in Rectangular Coordinates	294
	Example 6.1—Flow Between Parallel Plates	294
6.3	Alternative Solution Using a Shell Balance	301
	Example 6.2—Shell Balance for Flow Between Parallel Plates	301
	Example 6.3—Film Flow on a Moving Substrate	303
	Example 6.4—Transient Viscous Diffusion of Momentum (COMSOL)	307
6.4	Poiseuille and Couette Flows in Polymer Processing	313
	Example 6.5—The Single-Screw Extruder	314
	Example 6.6—Flow Patterns in a Screw Extruder (COMSOL)	319

6.5	Solution of the Equations of Motion in Cylindrical Coordinates	325
	Example 6.7—Flow Through an Annular Die	325
	Example 6.8—Spinning a Polymeric Fiber	328
6.6	Solution of the Equations of Motion in Spherical Coordinates	330
	Example 6.9—Analysis of a Cone-and-Plate Rheometer	331
	Problems for Chapter 6	336

CHAPTER 7—LAPLACE’S EQUATION, IRROTATIONAL AND POROUS-MEDIA FLOWS

7.1	Introduction	357
7.2	Rotational and Irrotational Flows	359
	Example 7.1—Forced and Free Vortices	362
7.3	Steady Two-Dimensional Irrotational Flow	364
7.4	Physical Interpretation of the Stream Function	367
7.5	Examples of Planar Irrotational Flow	369
	Example 7.2—Stagnation Flow	372
	Example 7.3—Combination of a Uniform Stream and a Line Sink (C)	374
	Example 7.4—Flow Patterns in a Lake (COMSOL)	376
7.6	Axially Symmetric Irrotational Flow	382
7.7	Uniform Streams and Point Sources	384
7.8	Doublets and Flow Past a Sphere	388
7.9	Single-Phase Flow in a Porous Medium	391
	Example 7.5—Underground Flow of Water	392
7.10	Two-Phase Flow in Porous Media	394
7.11	Wave Motion in Deep Water	400
	Problems for Chapter 7	404

CHAPTER 8—BOUNDARY-LAYER AND OTHER NEARLY UNIDIRECTIONAL FLOWS

8.1	Introduction	418
8.2	Simplified Treatment of Laminar Flow Past a Flat Plate	419
	Example 8.1—Flow in an Air Intake (C)	424
8.3	Simplification of the Equations of Motion	426
8.4	Blasius Solution for Boundary-Layer Flow	429
8.5	Turbulent Boundary Layers	432
	Example 8.2—Laminar and Turbulent Boundary Layers Compared	433
8.6	Dimensional Analysis of the Boundary-Layer Problem	434

8.7	Boundary-Layer Separation	437
	Example 8.3—Boundary-Layer Flow Between Parallel Plates (COMSOL)	439
	Example 8.4—Entrance Region for Laminar Flow Between Flat Plates	446
8.8	The Lubrication Approximation	448
	Example 8.5—Flow in a Lubricated Bearing (COMSOL)	454
8.9	Polymer Processing by Calendering	457
	Example 8.6—Pressure Distribution in a Calendered Sheet	461
8.10	Thin Films and Surface Tension	463
	Problems for Chapter 8	466

CHAPTER 9—TURBULENT FLOW

9.1	Introduction	480
	Example 9.1—Numerical Illustration of a Reynolds Stress Term	486
9.2	Physical Interpretation of the Reynolds Stresses	487
9.3	Mixing-Length Theory	488
9.4	Determination of Eddy Kinematic Viscosity and Mixing Length	491
9.5	Velocity Profiles Based on Mixing-Length Theory	493
	Example 9.2—Investigation of the von Kármán Hypothesis	494
9.6	The Universal Velocity Profile for Smooth Pipes	495
9.7	Friction Factor in Terms of Reynolds Number for Smooth Pipes	497
	Example 9.3—Expression for the Mean Velocity	498
9.8	Thickness of the Laminar Sublayer	499
9.9	Velocity Profiles and Friction Factor for Rough Pipe	501
9.10	Blasius-Type Law and the Power-Law Velocity Profile	502
9.11	A Correlation for the Reynolds Stresses	503
9.12	Computation of Turbulence by the k - ε Method	506
	Example 9.4—Flow Through an Orifice Plate (COMSOL)	508
	Example 9.5—Turbulent Flow in an Obstructed U-Duct (COMSOL)	514
9.13	Analogies Between Momentum and Heat Transfer	520
	Example 9.6—Evaluation of the Momentum/Heat- Transfer Analogies	522
9.14	Turbulent Jets	524
	Problems for Chapter 9	532

CHAPTER 10—BUBBLE MOTION, TWO-PHASE FLOW, AND FLUIDIZATION

10.1	Introduction	542
10.2	Rise of Bubbles in Unconfined Liquids	542
	Example 10.1—Rise Velocity of Single Bubbles	547
10.3	Pressure Drop and Void Fraction in Horizontal Pipes	547
	Example 10.2—Two-Phase Flow in a Horizontal Pipe	552
10.4	Two-Phase Flow in Vertical Pipes	554
	Example 10.3—Limits of Bubble Flow	557
	Example 10.4—Performance of a Gas-Lift Pump	561
	Example 10.5—Two-Phase Flow in a Vertical Pipe	564
10.5	Flooding	566
10.6	Introduction to Fluidization	570
10.7	Bubble Mechanics	572
10.8	Bubbles in Aggregatively Fluidized Beds	577
	Example 10.6—Fluidized Bed with Reaction (C)	583
	Problems for Chapter 10	586

CHAPTER 11—NON-NEWTONIAN FLUIDS

11.1	Introduction	602
11.2	Classification of Non-Newtonian Fluids	603
11.3	Constitutive Equations for Inelastic Viscous Fluids	606
	Example 11.1—Pipe Flow of a Power-Law Fluid	611
	Example 11.2—Pipe Flow of a Bingham Plastic	615
	Example 11.3—Non-Newtonian Flow in a Die (COMSOL)	617
11.4	Constitutive Equations for Viscoelastic Fluids	626
11.5	Response to Oscillatory Shear	633
11.6	Characterization of the Rheological Properties of Fluids	636
	Example 11.4—Proof of the Rabinowitsch Equation	637
	Example 11.5—Working Equation for a Coaxial- Cylinder Rheometer: Newtonian Fluid	642
	Problems for Chapter 11	644

CHAPTER 12—MICROFLUIDICS AND ELECTROKINETIC FLOW EFFECTS

12.1	Introduction	653
12.2	Physics of Microscale Fluid Mechanics	654
12.3	Pressure-Driven Flow Through Microscale Tubes	655
	Example 12.1—Calculation of Reynolds Numbers	655
12.4	Mixing, Transport, and Dispersion	656

12.5	Species, Energy, and Charge Transport	658
12.6	The Electrical Double Layer and Electrokinetic Phenomena	661
	Example 12.2—Relative Magnitudes of Electroosmotic and Pressure-Driven Flows	662
	Example 12.3—Electroosmotic Flow Around a Particle	667
	Example 12.4—Electroosmosis in a Microchannel (COMSOL)	667
	Example 12.5—Electroosmotic Switching in a Branched Microchannel (COMSOL)	673
12.7	Measuring the Zeta Potential	676
	Example 12.6—Magnitude of Typical Streaming Potentials	677
12.8	Electroviscosity	678
12.9	Particle and Macromolecule Motion in Microfluidic Channels	678
	Example 12.7—Gravitational and Magnetic Settling of Assay Beads	679
	Problems for Chapter 12	683

CHAPTER 13—AN INTRODUCTION TO COMPUTATIONAL
FLUID DYNAMICS AND ANSYS FLUENT

13.1	Introduction and Motivation	688
13.2	Numerical Methods	690
13.3	Learning CFD by Using ANSYS Fluent	699
13.4	Practical CFD Examples	703
	Example 13.1—Fluent: Developing Flow in a Pipe Entrance Region	704
	Example 13.2—Fluent: Pipe Flow Through a Sudden Expansion	707
	Example 13.3—Fluent: A Two-Dimensional Mixing Junction	709
	Example 13.4—Fluent: Flow over a Cylinder	713
	References for Chapter 13	719

CHAPTER 14—COMSOL MULTIPHYSICS FOR SOLVING
FLUID MECHANICS PROBLEMS

14.1	COMSOL Multiphysics—An Overview	720
14.2	The Steps for Solving Problems in COMSOL	723
14.3	How to Run COMSOL	725
	Example 14.1—Flow in a Porous Medium with an Impervious Hole (COMSOL)	726
	Example 14.2—Drawing a Complex Shape (COMSOL)	738

14.4	Variables, Constants, Expressions, and Units	741
14.5	Boundary Conditions	742
14.6	Variables Used by COMSOL	743
14.7	Wall Functions in Turbulent-Flow Problems	744
14.8	Streamline Plotting in COMSOL	747
14.9	Special COMSOL Features Used in the Examples	749
14.10	Drawing Tools	754
14.11	Fluid Mechanics Problems Solvable by COMSOL	756
14.12	Conclusion—Problems and Learning Tools	761
APPENDIX A: USEFUL MATHEMATICAL RELATIONSHIPS		762
APPENDIX B: ANSWERS TO THE TRUE/FALSE ASSERTIONS		768
APPENDIX C: SOME VECTOR AND TENSOR OPERATIONS		771
GENERAL INDEX		773
COMSOL MULTIPHYSICS INDEX		782
THE AUTHORS		784

PREFACE

THIS text has evolved from a need for a single volume that embraces a very wide range of topics in fluid mechanics. The material consists of two parts—four chapters on *macroscopic* or relatively large-scale phenomena, followed by 10 chapters on *microscopic* or relatively small-scale phenomena. Throughout, I have tried to keep in mind topics of industrial importance to the chemical engineer. The scheme is summarized in the following list of chapters.

Part I—Macroscopic Fluid Mechanics

- | | |
|--|---|
| 1. Introduction to Fluid Mechanics | 3. Fluid Friction in Pipes |
| 2. Mass, Energy, and Momentum Balances | 4. Flow in Chemical Engineering Equipment |

Part II—Microscopic Fluid Mechanics

- | | |
|--|--|
| 5. Differential Equations of Fluid Mechanics | 11. Non-Newtonian Fluids |
| 6. Solution of Viscous-Flow Problems | 12. Microfluidics and Electrokinetic Flow Effects |
| 7. Laplace’s Equation, Irrotational and Porous-Media Flows | 13. An Introduction to Computational Fluid Dynamics and Fluent |
| 8. Boundary-Layer and Other Nearly Unidirectional Flows | 14. COMSOL Multiphysics for Solving Fluid Mechanics Problems |
| 9. Turbulent Flow | |
| 10. Bubble Motion, Two-Phase Flow, and Fluidization | |

In our experience, an undergraduate fluid mechanics course can be based on Part I plus selected parts of Part II, and a graduate course can be based on much of Part II, supplemented perhaps by additional material on topics such as approximate methods and stability.

Third edition. I have attempted to bring the book up to date by the major addition of Chapters 12, 13, and 14—one on microfluidics and two on CFD (computational fluid dynamics). The choice of software for the CFD presented a difficulty; for various reasons, I selected ANSYS Fluent and COMSOL Multiphysics, but there was no intention of “promoting” these in favor of other excellent CFD programs. The use of CFD examples in the classroom really makes the subject

come “alive,” because the previous restrictive necessities of “nice” geometries and constant physical properties, etc., can now be lifted. Chapter 9, on turbulence, has also been extensively rewritten; here again, CFD allows us to venture beyond the usual flow in a pipe or between parallel plates and to investigate further practical situations such as turbulent mixing and recirculating flows.

Example problems. There is an average of about six completely worked examples in each chapter, including several involving COMSOL (dispersed throughout Part II) and Fluent (all in Chapter 13). The end of each example is marked by a small square: \square . All the COMSOL examples have been run with Version 5.2a, both on a Mac Book Pro computer and on Linux and Windows platforms; those using other releases of COMSOL may encounter slightly different windows than those reproduced here. The format for each COMSOL example is: (a) problem statement, (b) details of COMSOL implementation, (c) results, and (d) discussion.

The numerous end-of-chapter problems have been classified roughly as easy (E), moderate (M), or difficult/lengthy (D). The University of Cambridge has given permission, kindly endorsed by Professor J.F. Davidson, F.R.S., for several of their chemical engineering examination problems to be reproduced in original or modified form, and these have been given the additional designation of “(C).”

Acknowledgments. I gratefully acknowledge the valuable contributions of my former Michigan colleague Stacy Birmingham (non-Newtonian fluids), Brian Kirby of Cornell University (microfluidics), and Chi-Yang Cheng of ANSYS, Inc. (CFD). My former doctoral student and good friend Kevin Ellwood has been enormously helpful with this third edition. Although I wrote most of the original examples and Chapter 14 (in COMSOL 3.2), Kevin has supplied all the necessary expertise to rewrite them in the longer and more comprehensive COMSOL 5.2a.

I have had much help from many people at COMSOL Inc. and COMSOL AB. On their part, it has been a great cooperative effort all the way, involving the COMSOL Development, Licensing, and Applications teams, and I am very grateful to all for their assistance. At ANSYS, Inc., Chi-Yang Cheng was ideally suited for writing and updating the chapter on Computational Fluid Dynamics and Fluent.

I have appreciated the assistance of several other friends and colleagues, including Nitin Anturkar, Mark Burns, John Ellis, Scott Fogler, Tom Grindley, Amy Horvath, Leenaporn Jongpaiboonkit, Lisa Keyser, Ronald Larson, Susan Montgomery, Sunitha Nagrath, Michael Solomon, Sandra Swisher, Robert Ziff, my wife, Mary Ann Gibson Wilkes, and the late Stuart Churchill, Kartic Khilar, Donald Nicklin, Margaret Sansom, and Rasin Tek. I also drew much inspiration from my many students and friends at the University of Michigan and Chulalongkorn University in Bangkok. Others are acknowledged in specific literature citations.

Also exceptionally helpful, with prompt attention for this third edition, were the Prentice Hall editing and production team, to whom I extend my gratitude: Kathleen Karcher, Carol Lallier, Laura Lewin, Julie Nahil, and Dana Wilson.

Further information. The website <http://fmche.engin.umich.edu> is maintained as a “bulletin board” for giving additional information about the book—hints for problem solutions, *errata*, how to contact the authors, etc.—as proves desirable. My own Internet address is wilkes@umich.edu. The text was composed on an old but very faithful Power Macintosh G5 computer using the \TeX tures “typesetting” program. Eleven-point type was used for the majority of the text. Most of the figures were constructed using MacDraw Pro, Excel, and Kaleida-Graph.

Professor Terence Fox, to whose memory this book is dedicated, was a Cambridge engineering graduate who worked from 1933 to 1937 at Imperial Chemical Industries Ltd., Billingham, Yorkshire. Returning to Cambridge, he taught engineering from 1937 to 1946 before being selected to lead the Department of Chemical Engineering at the University of Cambridge during its formative years after the end of World War II. As a scholar and a gentleman, Fox was a shy but exceptionally brilliant person who had great insight into what was important and who quickly brought the department to a preeminent position, which it still maintains. He succeeded in combining an industrial perspective with intellectual rigor. Fox relinquished the leadership of the department in 1959, after he had secured a permanent new building for it (carefully designed in part by himself).¹



T.R.C. Fox

Fox was instrumental in bringing an outstanding cast of faculty members into the department during my student years there—Stan Sellers, Kenneth Denbigh, John Davidson, Peter Danckwerts, Denys Armstrong, and Peter Gray. He also kindly accepted me in 1956 as a junior faculty member, and I spent four good years in the Cambridge University Department of Chemical Engineering. Danckwerts subsequently wrote an appreciation² of Fox’s talents, saying, with almost complete accuracy: “Fox instigated no research and published nothing.” How times have changed—today, unless he were known personally, his résumé would probably be cast aside and he would stand little chance of being hired, let alone of receiving tenure! However, his lectures, meticulously written

handouts, enthusiasm, genius, and friendship were a great inspiration to me, and I have much pleasure in acknowledging his positive impact on my career.

James O. Wilkes
August 18, 2017

¹ The department—now Chemical Engineering and Biotechnology—has just (2017) moved to a new building on the West Cambridge site.

² P.V. Danckwerts, “Chemical engineering comes to Cambridge,” *The Cambridge Review*, pp. 53–55, February 28, 1983.

This page intentionally left blank

PART I

MACROSCOPIC

FLUID MECHANICS

Some Greek Letters

α	alpha	ν	nu
β	beta	ξ, Ξ	xi
γ, Γ	gamma	o	omicron
δ, Δ	delta	π, ϖ, Π	pi
ϵ, ε	epsilon	ρ, ϱ	rho
ζ	zeta	$\sigma, \varsigma, \Sigma$	sigma
η	eta	τ	tau
$\theta, \vartheta, \Theta$	theta	υ, Υ	upsilon
ι	iota	ϕ, φ, Φ	phi
κ	kappa	χ	chi
λ, Λ	lambda	ψ, Ψ	psi
μ	mu	ω, Ω	omega

INTRODUCTION TO FLUID MECHANICS

1.1 Fluid Mechanics in Chemical Engineering

A knowledge of fluid mechanics is essential for the chemical engineer because the majority of chemical-processing operations are conducted either partly or totally in the fluid phase. Examples of such operations abound in the biochemical, chemical, energy, fermentation, materials, mining, petroleum, pharmaceuticals, polymer, and waste-processing industries.

There are two principal reasons for placing such an emphasis on fluids. First, at typical operating conditions, an enormous number of materials normally exist as gases or liquids or can be transformed into such phases. Second, it is usually more efficient and cost-effective to work with fluids in contrast to solids. Even some operations with solids can be conducted in a quasi-fluidlike manner; examples are the fluidized-bed catalytic refining of hydrocarbons and the long-distance pipelining of coal particles using water as the agitating and transporting medium.

Although there is inevitably a significant amount of theoretical development, almost *all* the material in this book has some application to chemical processing and other important practical situations. Throughout, we shall endeavor to present an understanding of the *physical* behavior involved; only then is it really possible to comprehend the accompanying theory and equations.

1.2 General Concepts of a Fluid

We must begin by responding to the question, “What *is* a fluid?” Broadly speaking, a fluid is a substance that will deform *continuously* when it is subjected to a tangential or *shear* force, much as a similar type of force is exerted when a water-skier skims over the surface of a lake or butter is spread on a slice of bread. The rate at which the fluid deforms continuously depends not only on the magnitude of the applied force but also on a property of the fluid called its *viscosity* or resistance to deformation and flow. Solids will also deform when sheared, but a position of equilibrium is soon reached in which elastic forces induced by the deformation of the solid exactly counterbalance the applied shear force, and further deformation ceases.

A simple apparatus for shearing a fluid is shown in Fig. 1.1. The fluid is contained between two concentric cylinders; the outer cylinder is stationary, and the inner one (of radius R) is rotated steadily with an angular velocity ω . This shearing motion of a fluid can continue indefinitely, provided that a source of energy—supplied by means of a torque here—is available for rotating the inner cylinder. The diagram also shows the resulting *velocity profile*; note that the velocity in the direction of rotation varies from the peripheral velocity $R\omega$ of the inner cylinder down to zero at the outer stationary cylinder, these representing typical *no-slip* conditions at both locations. However, if the intervening space is filled with a solid—even one with obvious elasticity, such as rubber—only a limited rotation will be possible before a position of equilibrium is reached, unless, of course, the torque is so high that *slip* occurs between the rubber and the cylinder.

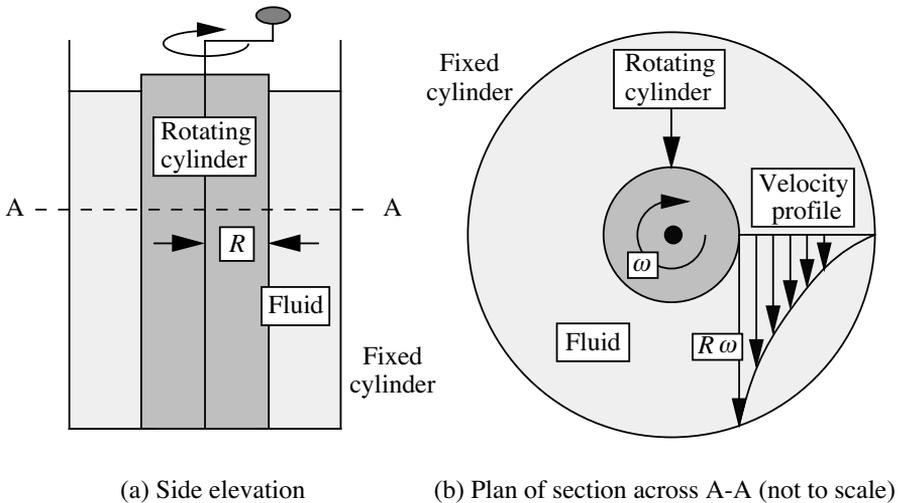


Fig. 1.1 Shearing of a fluid.

There are various classes of fluids. Those that behave according to nice and obvious simple laws, such as water, oil, and air, are generally called *Newtonian* fluids. These fluids exhibit constant viscosity but, under typical processing conditions, virtually no elasticity. Fortunately, a very large number of fluids of interest to the chemical engineer exhibit Newtonian behavior, which will be assumed throughout the book, except in Chapter 11, which is devoted to the study of non-Newtonian fluids.

A fluid whose viscosity is not constant (but depends, for example, on the intensity to which it is being sheared), or which exhibits significant elasticity, is termed *non-Newtonian*. For example, several polymeric materials subject to deformation can “remember” their recent molecular configurations, and in attempting to recover their recent states, they will exhibit *elasticity* in addition to viscosity. Other fluids, such as drilling mud and toothpaste, behave essentially as solids and

will *not* flow when subject to *small* shear forces, but *will* flow readily under the influence of *high* shear forces.

Fluids can also be broadly classified into two main categories—liquids and gases. *Liquids* are characterized by relatively high densities and viscosities, with molecules close together; their volumes tend to remain constant, roughly independent of pressure, temperature, or the size of the vessels containing them. *Gases*, on the other hand, have relatively low densities and viscosities, with molecules far apart; generally, they will completely fill the container in which they are placed. However, these two states—liquid and gaseous—represent but the two extreme ends of a continuous *spectrum* of possibilities.

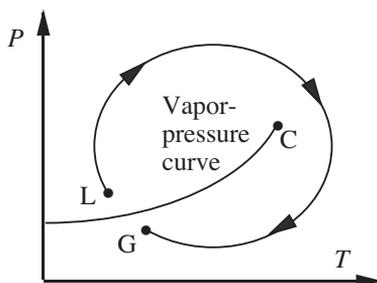


Fig. 1.2 When does a liquid become a gas?

The situation is readily illustrated by considering a fluid that is initially a gas at point G on the pressure/temperature diagram shown in Fig. 1.2. By increasing the pressure, and perhaps lowering the temperature, the vapor-pressure curve is soon reached and crossed, and the fluid condenses and apparently becomes a liquid at point L. By continuously adjusting the pressure and temperature so that the clockwise path is followed, and circumnavigating the critical point C in the process, the fluid is returned to G, where it is presumably once more a gas. But where does the transition from liquid at L to gas at G occur? The answer is at no single point, but rather that the change is a continuous and gradual one, through a whole spectrum of intermediate states.

1.3 Stresses, Pressure, Velocity, and the Basic Laws

Stresses. The concept of a *force* should be readily apparent. In fluid mechanics, a force per unit area, called a *stress*, is usually found to be a more convenient and versatile quantity than the force itself. Further, when considering a specific surface, there are two types of stresses that are particularly important.

1. The first type of stress, shown in Fig. 1.3(a), acts *perpendicularly* to the surface and is therefore called a *normal* stress; it will be tensile or compressive, depending on whether it tends to stretch or to compress the fluid on which it acts. The normal stress equals F/A , where F is the normal force and A is the area of the surface on which it acts. The dotted outlines show the volume changes caused

by deformation. In fluid mechanics, *pressure* is usually the most important type of *compressive* stress, and will shortly be discussed in more detail.

2. The second type of stress, shown in Fig. 1.3(b), acts *tangentially* to the surface; it is called a *shear stress* τ and equals F/A , where F is the tangential force and A is the area on which it acts. Shear stress is transmitted through a fluid by interaction of the molecules with one another. A knowledge of the shear stress is very important when studying the flow of viscous Newtonian fluids. For a given rate of deformation, measured by the time derivative $d\gamma/dt$ of the small angle of deformation γ , the shear stress τ is directly proportional to the *viscosity* of the fluid (see Fig. 1.3(b)).

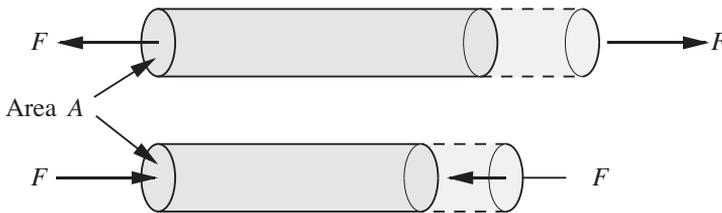


Fig. 1.3(a) Tensile and compressive normal stresses F/A , acting on a cylinder, causing elongation and shrinkage, respectively.

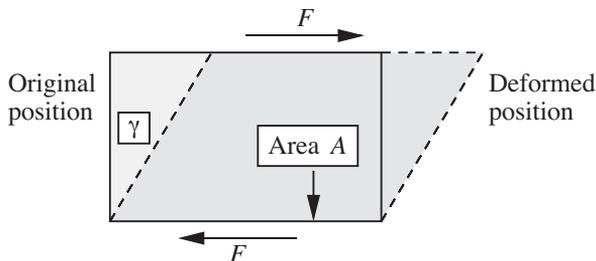


Fig. 1.3(b) Shear stress $\tau = F/A$, acting on a rectangular parallelepiped, shown in cross section, causing a deformation measured by the angle γ (whose magnitude is exaggerated here).

Pressure. In virtually all *hydrostatic* situations—those involving fluids at rest—the fluid molecules are in a state of *compression*. For example, for the swimming pool whose cross section is depicted in Fig. 1.4, this compression at a typical point P is caused by the downward gravitational weight of the water *above* point P. The degree of compression is measured by a scalar, p —the *pressure*.

A small inflated spherical balloon pulled down from the surface and tethered at the bottom by a weight will still retain its spherical shape (apart from a small distortion at the point of the tether), but will be diminished in size, as in Fig. 1.4(a). It is apparent that there must be forces acting *normally inward* on the

surface of the balloon and that these must essentially be uniform for the shape to remain spherical, as in Fig. 1.4(b).

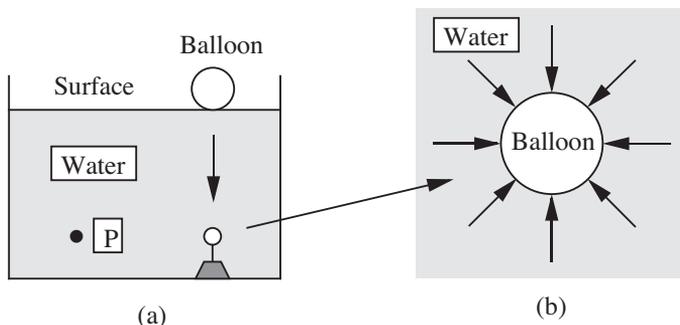


Fig. 1.4 (a) Balloon submerged in a swimming pool; (b) enlarged view of the compressed balloon, with pressure forces acting on it.

Although the pressure p is a scalar, it typically appears in tandem with an area A (assumed small enough so that the pressure is uniform over it). By definition of pressure, the surface experiences a normal compressive force $F = pA$. Thus, pressure has units of a force per unit area—the same as a stress.

The value of the pressure at a point is *independent* of the orientation of any area associated with it, as can be deduced with reference to a differentially small wedge-shaped element of the fluid, shown in Fig. 1.5.

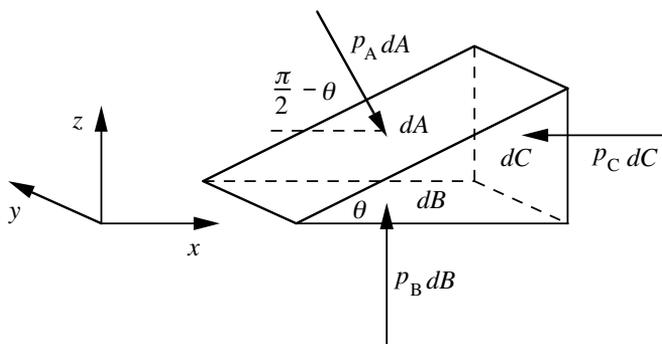


Fig. 1.5 Equilibrium of a wedge of fluid.

Due to the pressure there are three forces, $p_A dA$, $p_B dB$, and $p_C dC$, that act on the three rectangular faces of areas dA , dB , and dC . Since the wedge is not moving, equate the two forces acting on it in the horizontal or x direction, noting that $p_A dA$ must be resolved through an angle $(\pi/2 - \theta)$ by multiplying it by $\cos(\pi/2 - \theta) = \sin \theta$:

$$p_A dA \sin \theta = p_C dC. \quad (1.1)$$

The vertical force $p_B dB$ acting on the bottom surface is omitted from Eqn. (1.1) because it has no component in the x direction. The horizontal pressure forces

acting in the y direction on the two triangular faces of the wedge are also omitted, since again these forces have no effect in the x direction. From geometrical considerations, areas dA and dC are related by:

$$dC = dA \sin \theta. \quad (1.2)$$

These last two equations yield:

$$p_A = p_C, \quad (1.3)$$

verifying that the pressure is independent of the orientation of the surface being considered. A force balance in the z direction leads to a similar result, $p_A = p_B$.¹

For *moving* fluids, the normal stresses include both a pressure *and* extra stresses caused by the motion of the fluid, as discussed in detail in Section 5.6.

The amount by which a certain pressure exceeds that of the atmosphere is termed the *gauge* pressure, the reason being that many common pressure gauges are really *differential* instruments, reading the difference between a required pressure and that of the surrounding atmosphere. *Absolute* pressure equals the gauge pressure plus the atmospheric pressure.

Velocity. Many problems in fluid mechanics deal with the *velocity* of the fluid at a point, equal to the rate of change of the position of a fluid particle with time, thus having both a magnitude and a direction. In some situations, particularly those treated from the *macroscopic* viewpoint, as in Chapters 2, 3, and 4, it sometimes suffices to ignore variations of the velocity with position. In other cases—particularly those treated from the *microscopic* viewpoint, as in Chapter 6 and later—it is invariably essential to consider variations of velocity with position.

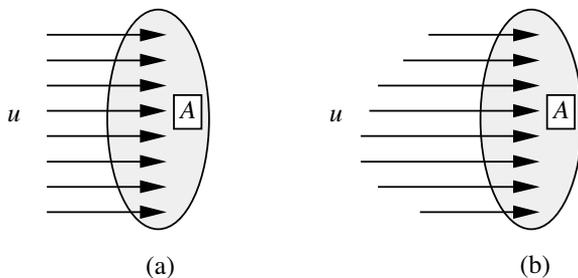


Fig. 1.6 Fluid passing through an area A :
(a) uniform velocity, (b) varying velocity.

Velocity is not only important in its own right but leads immediately to three *fluxes* or flow rates. Specifically, if u denotes a *uniform* velocity (not varying with position):

¹ Actually, a force balance in the z direction demands that the gravitational weight of the wedge be considered, which is proportional to the *volume* of the wedge. However, the pressure forces are proportional to the *areas* of the faces. It can readily be shown that the volume-to-area effect becomes vanishingly small as the wedge becomes infinitesimally small, so that the gravitational weight is inconsequential.

1. If the fluid passes through a plane of area A normal to the direction of the velocity, as shown in Fig. 1.6, the corresponding *volumetric* flow rate of fluid through the plane is $Q = uA$.
2. The corresponding *mass* flow rate is $m = \rho Q = \rho uA$, where ρ is the (constant) fluid density. The alternative notation with an overdot, \dot{m} , is also used.
3. When velocity is multiplied by mass, it gives *momentum*, a quantity of prime importance in fluid mechanics. The corresponding *momentum* flow rate passing through the area A is $\dot{M} = mu = \rho u^2 A$.

If u and/or ρ should vary with position, as in Fig. 1.6(b), the corresponding expressions will be seen later to involve *integrals* over the area A : $Q = \int_A u \, dA$, $m = \int_A \rho u \, dA$, $\dot{M} = \int_A \rho u^2 \, dA$.

Basic laws. In principle, the *laws* of fluid mechanics can be stated simply, and—in the absence of relativistic effects—amount to conservation of mass, energy, and momentum. When applying these laws, the procedure is first to identify a system, its boundary, and its surroundings; and second, to identify how the system interacts with its surroundings. Refer to Fig. 1.7 and let the quantity X represent either mass, energy, or momentum. Also recognize that X may be *added* from the surroundings and transported into the system by an amount X_{in} across the boundary, and may likewise be *removed* or transported out of the system to the surroundings by an amount X_{out} .

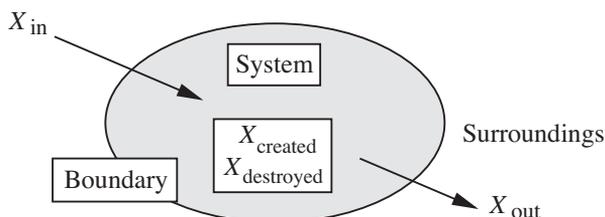


Fig. 1.7 A system and transports to and from it.

The general conservation law gives the increase ΔX_{system} in the X -content of the system as:

$$X_{\text{in}} - X_{\text{out}} = \Delta X_{\text{system}}. \quad (1.4a)$$

Although this basic law may appear intuitively obvious, it applies *only* to a very restricted selection of properties X . For example, it is not *generally* true if X is another extensive property such as volume, and it is quite meaningless if X is an intensive property such as pressure or temperature.

In certain cases, where X^i is the mass of a definite chemical species i , we may also have an amount of creation X_{created}^i or destruction $X_{\text{destroyed}}^i$ due to chemical reaction, in which case the general law becomes:

$$X_{\text{in}}^i - X_{\text{out}}^i + X_{\text{created}}^i - X_{\text{destroyed}}^i = \Delta X_{\text{system}}^i. \quad (1.4b)$$

The conservation law will be discussed further in Section 2.1 and is of such fundamental importance that in various guises it will find numerous applications throughout all of this text.

To solve a physical problem, the following information concerning the fluid is also usually needed:

1. The physical properties of the fluid involved, as discussed in Section 1.4.
2. For situations involving fluid *flow*, a *constitutive equation* for the fluid, which relates the various stresses to the flow pattern.

1.4 Physical Properties—Density, Viscosity, and Surface Tension

There are three physical properties of fluids that are particularly important: density, viscosity, and surface tension. Each of these will be defined and viewed briefly in terms of molecular concepts, and their dimensions will be examined in terms of mass, length, and time (M, L, and T). The physical properties depend primarily on the particular fluid. For liquids, viscosity also depends strongly on the temperature; for gases, viscosity is *approximately* proportional to the square root of the absolute temperature. The density of gases depends almost directly on the absolute pressure; for most other cases, the effect of pressure on physical properties can be disregarded.

Typical processes often run almost isothermally, and in these cases the effect of temperature can be ignored. Except in certain special cases, such as the flow of a compressible gas (in which the density is not constant) or a liquid under a very high shear rate (in which viscous dissipation can cause significant internal heating), or situations involving exothermic or endothermic reactions, we shall ignore any variation of physical properties with pressure and temperature.

Density. Density depends on the mass of an individual molecule and the number of such molecules that occupy a unit of volume. For liquids, density depends primarily on the particular liquid and, to a much smaller extent, on its temperature. Representative densities of liquids are given in Table 1.1.² (See Eqns. (1.9)–(1.11) for an explanation of the specific gravity and coefficient of thermal expansion columns.) The accuracy of the values given in Tables 1.1–1.6 is adequate for the calculations needed in this text. However, if highly accurate values are needed, particularly at extreme conditions, then specialized information should be sought elsewhere.

The *density* ρ of a fluid is defined as its mass per unit volume and indicates its inertia or resistance to an accelerating force. Thus:

$$\rho = \frac{\text{mass}}{\text{volume}} [=] \frac{\text{M}}{\text{L}^3}, \quad (1.5)$$

² The values given in Tables 1.1, 1.3, 1.4, 1.5, and 1.6 are based on information given in J.H. Perry, ed., *Chemical Engineers' Handbook*, 3rd ed., McGraw-Hill, New York, 1950.

in which the notation “[=]” is consistently used to indicate the *dimensions* of a quantity.³ It is usually understood in Eqn. (1.5) that the volume is chosen so that it is neither so small that it has no chance of containing a representative selection of molecules nor so large that (in the case of gases) changes of pressure cause significant changes of density throughout the volume. A medium characterized by a density is called a *continuum* and follows the classical laws of mechanics—including Newton’s law of motion, as described in this book.

Table 1.1 Specific Gravities, Densities, and Thermal Expansion Coefficients of Liquids at 20 °C

<i>Liquid</i>	<i>Sp. Gr.</i> <i>s</i>	<i>Density, ρ</i>		<i>α</i> °C ⁻¹
		kg/m ³	lb _m /ft ³	
Acetone	0.792	792	49.4	0.00149
Benzene	0.879	879	54.9	0.00124
Crude oil, 35° API	0.851	851	53.1	0.00074
Ethanol	0.789	789	49.3	0.00112
Glycerol	1.26 (50 °C)	1,260	78.7	—
Kerosene	0.819	819	51.1	0.00093
Mercury	13.55	13,550	845.9	0.000182
Methanol	0.792	792	49.4	0.00120
<i>n</i> -Octane	0.703	703	43.9	—
<i>n</i> -Pentane	0.630	630	39.3	0.00161
Water	0.998	998	62.3	0.000207

Degrees API (American Petroleum Institute) are related to specific gravity *s* by the formula:

$$^{\circ}\text{API} = \frac{141.5}{s} - 131.5. \quad (1.6)$$

Note that for water, $^{\circ}\text{API} = 10$, with correspondingly *higher* values for liquids that are *less* dense. Thus, for the crude oil listed in Table 1.1, Eqn. (1.6) indeed gives $141.5/0.851 - 131.5 \doteq 35^{\circ}\text{API}$.

Densities of gases. For *ideal* gases, $pV = nRT$, where p is the *absolute* pressure, V is the volume of the gas, n is the number of moles (abbreviated as “mol” when used as a unit), R is the gas constant, and T is the *absolute* temperature. If M_w is the molecular weight of the gas, it follows that:

$$\rho = \frac{nM_w}{V} = \frac{M_w p}{RT}. \quad (1.7)$$

³ An early appearance of the notation “[=]” is in R.B. Bird, W.E. Stewart, and E.N. Lightfoot, *Transport Phenomena*, Wiley, New York, 1960.

Thus, the density of an ideal gas depends on the molecular weight, absolute pressure, and absolute temperature. Values of the gas constant R are given in Table 1.2 for various systems of units. Note that degrees Kelvin, formerly represented by “°K,” is now more simply denoted as “K.”

Table 1.2 Values of the Gas Constant, R

Value	Units
8.314	J/g-mol K
0.08314	liter bar/g-mol K
0.08206	liter atm/g-mol K
1.987	cal/g-mol K
10.73	psia ft ³ /lb-mol °R
0.7302	ft ³ atm/lb-mol °R
1,545	ft lb _f /lb-mol °R

For a *nonideal* gas, the compressibility factor Z (a function of p and T) is introduced into the denominator of Eqn. (1.7), giving:

$$\rho = \frac{nM_w}{V} = \frac{M_w p}{ZRT}. \quad (1.8)$$

Thus, the extent to which Z deviates from unity gives a measure of the nonideality of the gas.

The *isothermal compressibility* of a gas is defined as:

$$\beta = -\frac{1}{V} \left(\frac{\partial V}{\partial p} \right)_T,$$

and equals—at constant temperature—the fractional *decrease* in volume caused by a unit *increase* in the pressure. For an ideal gas, $\beta = 1/p$, the reciprocal of the absolute pressure.

The *coefficient of thermal expansion* α of a material is its isobaric (constant pressure) fractional increase in volume per unit rise in temperature:

$$\alpha = \frac{1}{V} \left(\frac{\partial V}{\partial T} \right)_p. \quad (1.9)$$

Since, for a given mass, density is inversely proportional to volume, it follows that for moderate temperature ranges (over which α is essentially constant) the density of most liquids is approximately a linear function of temperature:

$$\rho \doteq \rho_0[1 - \alpha(T - T_0)], \quad (1.10)$$

where ρ_0 is the density at a reference temperature T_0 . For an ideal gas, $\alpha = 1/T$, the reciprocal of the absolute temperature.

The *specific gravity* s of a fluid is the ratio of the density ρ to the density ρ_{SC} of a reference fluid at some *standard condition*:

$$s = \frac{\rho}{\rho_{SC}}. \quad (1.11)$$

For *liquids*, ρ_{SC} is usually the density of water at 4°C, which equals 1.000 g/ml or 1,000 kg/m³. For *gases*, ρ_{SC} is sometimes taken as the density of air at 60°F and 14.7 psia, which is approximately 0.0759 lb_m/ft³, and sometimes at 0°C and one atmosphere absolute; since there is no *single* standard for gases, care must obviously be taken when interpreting published values. For *natural gas*, consisting primarily of methane and other hydrocarbons, the *gas gravity* is defined as the ratio of the molecular weight of the gas to that of air (28.8 lb_m/lb-mol).

Values of the molecular weight M_w are listed in Table 1.3 for several commonly occurring gases, together with their densities at standard conditions of atmospheric pressure and 0°C.

Table 1.3 Gas Molecular Weights and Densities
(the Latter at Atmospheric Pressure and 0°C)

Gas	M_w	Standard Density	
		kg/m ³	lb _m /ft ³
Air	28.8	1.29	0.0802
Carbon dioxide	44.0	1.96	0.1225
Ethylene	28.0	1.25	0.0780
Hydrogen	2.0	0.089	0.0056
Methane	16.0	0.714	0.0446
Nitrogen	28.0	1.25	0.0780
Oxygen	32.0	1.43	0.0891

Viscosity. The viscosity of a fluid measures its resistance to flow under an applied shear stress, as shown in Fig. 1.8(a). There, the fluid is ideally supposed to be confined in a relatively small gap of thickness h between one plate that is stationary and another plate that is moving steadily at a velocity V relative to the first plate.

In practice, the situation would essentially be realized by a fluid occupying the space between two concentric cylinders of large radii rotating relative to each other, as in Fig. 1.1. A steady force F to the right is applied to the upper plate (and, to preserve equilibrium, to the left on the lower plate) in order to maintain a

constant motion and to overcome the viscous friction caused by layers of molecules sliding over one another.

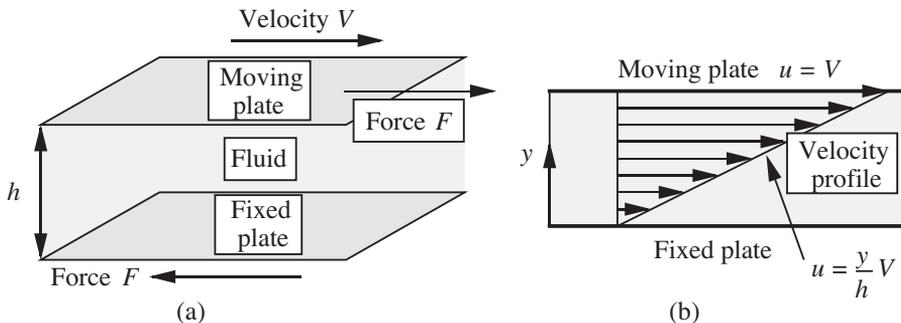


Fig. 1.8 (a) Fluid in shear between parallel plates; (b) the ensuing linear velocity profile.

Under these circumstances, the velocity u of the fluid to the right is found experimentally to vary linearly from zero at the lower plate ($y = 0$) to V itself at the upper plate, as in Fig. 1.8(b), corresponding to no-slip conditions at each plate. At any intermediate distance y from the lower plate, the velocity is simply:

$$u = \frac{y}{h} V. \quad (1.12)$$

Recall that the *shear stress* τ is the tangential applied force F per unit area:

$$\tau = \frac{F}{A}, \quad (1.13)$$

in which A is the area of each plate. Experimentally, for a large class of materials, called *Newtonian* fluids, the shear stress is directly proportional to the velocity *gradient*:

$$\tau = \mu \frac{du}{dy} = \mu \frac{V}{h}. \quad (1.14)$$

The proportionality constant μ is called the *viscosity* of the fluid; its dimensions can be found by substituting those for F (ML/T^2), A (L^2), and du/dy (T^{-1}), giving:

$$\mu [=] \frac{\text{M}}{\text{LT}}. \quad (1.15)$$

Representative units for viscosity are $\text{g}/\text{cm s}$ (also known as *poise*, designated by P), $\text{kg}/\text{m s}$, and $\text{lb}_m/\text{ft hr}$. The *centipoise* (cP), one hundredth of a poise, is also a convenient unit, since the viscosity of water at room temperature is approximately 0.01 P or 1.0 cP. Table 1.11 gives viscosity conversion factors.

The viscosity of a fluid may be determined by observing the pressure drop when it flows at a known rate in a tube, as analyzed in Section 3.2. More sophisticated

methods for determining the *rheological* or flow properties of fluids—including viscosity—are also discussed in Chapter 11; such methods often involve containing the fluid in a small gap between two surfaces, moving one of the surfaces, and measuring the force needed to maintain the other surface stationary.

Table 1.4 Viscosity Parameters for Liquids

<i>Liquid</i>	<i>a</i>	<i>b</i>	<i>a</i>	<i>b</i>
	(T in K)		(T in °R)	
Acetone	14.64	−2.77	16.29	−2.77
Benzene	21.99	−3.95	24.34	−3.95
Crude oil, 35° API	53.73	−9.01	59.09	−9.01
Ethanol	31.63	−5.53	34.93	−5.53
Glycerol	106.76	−17.60	117.22	−17.60
Kerosene	33.41	−5.72	36.82	−5.72
Methanol	22.18	−3.99	24.56	−3.99
Octane	17.86	−3.25	19.80	−3.25
Pentane	13.46	−2.62	15.02	−2.62
Water	29.76	−5.24	32.88	−5.24

The *kinematic viscosity* ν is the ratio of the viscosity to the density:

$$\nu = \frac{\mu}{\rho}, \quad (1.16)$$

and is important in cases in which significant viscous *and* gravitational forces coexist. The reader can check that the dimensions of ν are L²/T, which are identical to those for the diffusion coefficient \mathcal{D} in mass transfer and for the thermal diffusivity $\alpha = k/\rho c_p$ in heat transfer. There is a definite analogy among the three quantities—indeed, as seen later, the value of the kinematic viscosity governs the rate of “diffusion” of momentum in the laminar and turbulent flow of fluids.

Viscosities of liquids. The viscosities μ of liquids generally vary approximately with absolute temperature T according to:

$$\ln \mu \doteq a + b \ln T \quad \text{or} \quad \mu \doteq e^{a+b \ln T}, \quad (1.17)$$

and—to a good approximation—are independent of pressure. Assuming that μ is measured in centipoise and that T is either in degrees Kelvin or Rankine, appropriate parameters a and b are given in Table 1.4 for several representative liquids. The resulting values for viscosity are approximate, suitable for a first design only.

Viscosities of gases. The viscosity μ of many gases is approximated by the formula:

$$\mu \doteq \mu_0 \left(\frac{T}{T_0} \right)^n, \quad (1.18)$$

in which T is the absolute temperature (Kelvin or Rankine), μ_0 is the viscosity at an absolute reference temperature T_0 , and n is an empirical exponent that best fits the experimental data. The values of the parameters μ_0 and n for atmospheric pressure are given in Table 1.5; recall that to a *first* approximation, the viscosity of a gas is independent of pressure. The values μ_0 are given in centipoise and correspond to a reference temperature of $T_0 \doteq 273 \text{ K} \doteq 492 \text{ }^\circ\text{R}$.

Table 1.5 Viscosity Parameters for Gases

Gas	μ_0 , cP	n
Air	0.0171	0.768
Carbon dioxide	0.0137	0.935
Ethylene	0.0096	0.812
Hydrogen	0.0084	0.695
Methane	0.0120	0.873
Nitrogen	0.0166	0.756
Oxygen	0.0187	0.814

Surface tension.⁴ Surface tension is the tendency of the surface of a liquid to behave like a stretched elastic membrane. There is a natural tendency for liquids to minimize their surface area. The obvious case is that of a liquid droplet on a horizontal surface that is not wetted by the liquid—mercury on glass, or water on a surface that also has a thin oil film on it. For small droplets, such as those on the left of Fig. 1.9, the droplet adopts a shape that is almost perfectly spherical, because in this configuration there is the least surface area for a given volume.



Fig. 1.9 The larger droplets are flatter because gravity is becoming more important than surface tension.

⁴ We recommend that this subsection be omitted at a first reading, because the concept of surface tension is somewhat involved and is relevant only to a small part of this book.

For larger droplets, the shape becomes somewhat flatter because of the increasingly important gravitational effect, which is roughly proportional to a^3 , where a is the approximate droplet radius, whereas the surface area is proportional only to a^2 . Thus, the ratio of gravitational to surface tension effects depends roughly on the value of $a^3/a^2 = a$, and is therefore increasingly important for the larger droplets, as shown to the right in Fig. 1.9. Overall, the situation is very similar to that of a water-filled balloon, in which the water accounts for the gravitational effect and the balloon acts like the surface tension.

A fundamental property is the *surface energy*, which is defined with reference to Fig. 1.10(a). A molecule I, situated in the *interior* of the liquid, is attracted equally in all directions by its neighbors. However, a molecule S, situated in the *surface*, experiences a net attractive force into the bulk of the liquid. (The vapor above the surface, being comparatively rarefied, exerts a negligible force on molecule S.) Therefore, work has to be done against such a force in bringing an interior molecule to the surface. Hence, an energy σ , called the *surface energy*, can be attributed to a unit area of the surface.

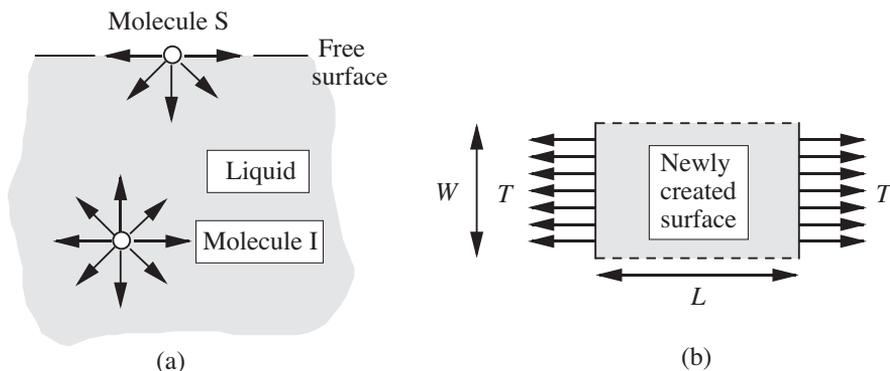


Fig. 1.10 (a) Molecules in the interior and surface of a liquid; (b) newly created surface caused by moving the tension T through a distance L .

An equivalent viewpoint is to consider the surface tension T existing per unit distance of a line drawn in the surface, as shown in Fig. 1.10(b). Suppose that such a tension has moved a distance L , thereby creating an area WL of fresh surface. The work done is the product of the force, TW , and the distance L through which it moves, namely TWL , and this must equal the newly acquired surface energy σWL . Therefore, $T = \sigma$; both quantities have units of force per unit distance, such as N/m, which is equivalent to energy per unit area, such as J/m².

We next find the amount $p_1 - p_2$, by which the pressure p_1 inside a liquid droplet of radius r , shown in Fig. 1.11(a), exceeds the pressure p_2 of the surrounding vapor. Fig. 1.11(b) illustrates the equilibrium of the upper hemisphere of the droplet, which is also surrounded by an imaginary cylindrical “control surface” ABCD, on which forces in the vertical direction will soon be equated. Observe that the

internal pressure p_1 is trying to blow apart the two hemispheres (the lower one is not shown), whereas the surface tension σ is trying to pull them together.

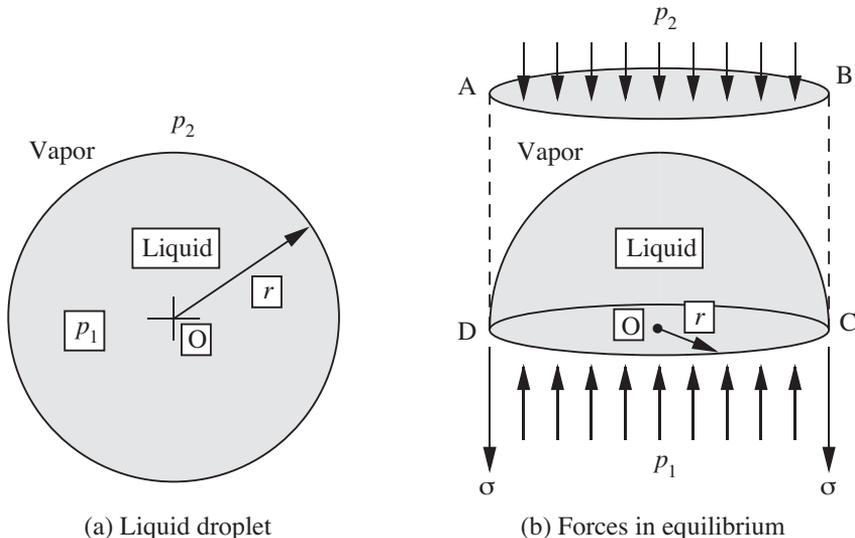


Fig. 1.11 Pressure change across a curved surface.

In more detail, there are two different types of forces to be considered:

1. That due to the *pressure difference* between the pressure inside the droplet and the vapor outside, each acting on an area πr^2 (that of the circles CD and AB):

$$(p_1 - p_2)\pi r^2. \quad (1.19)$$

2. That due to surface tension, which acts on the circumference of length $2\pi r$:

$$2\pi r\sigma. \quad (1.20)$$

At equilibrium, these two forces are equated, giving:

$$\Delta p = p_1 - p_2 = \frac{2\sigma}{r}. \quad (1.21)$$

That is, there is a *higher* pressure on the concave or droplet side of the interface. What would the pressure change be for a *bubble* instead of a droplet? Why?

More generally, if an interface has principal radii of curvature r_1 and r_2 , the increase in pressure can be shown to be:

$$p_1 - p_2 = \sigma \left(\frac{1}{r_1} + \frac{1}{r_2} \right). \quad (1.22)$$

For a sphere of radius r , as in Fig. 1.11, both radii are equal, so that $r_1 = r_2 = r$, and $p_1 - p_2 = 2\sigma/r$. Problem 1.31 involves a situation in which $r_1 \neq r_2$. The radii r_1 and r_2 will have the same sign if the corresponding centers of curvature are on the same side of the interface; if not, they will be of opposite sign. Appendix A contains further information about the curvature of a surface.

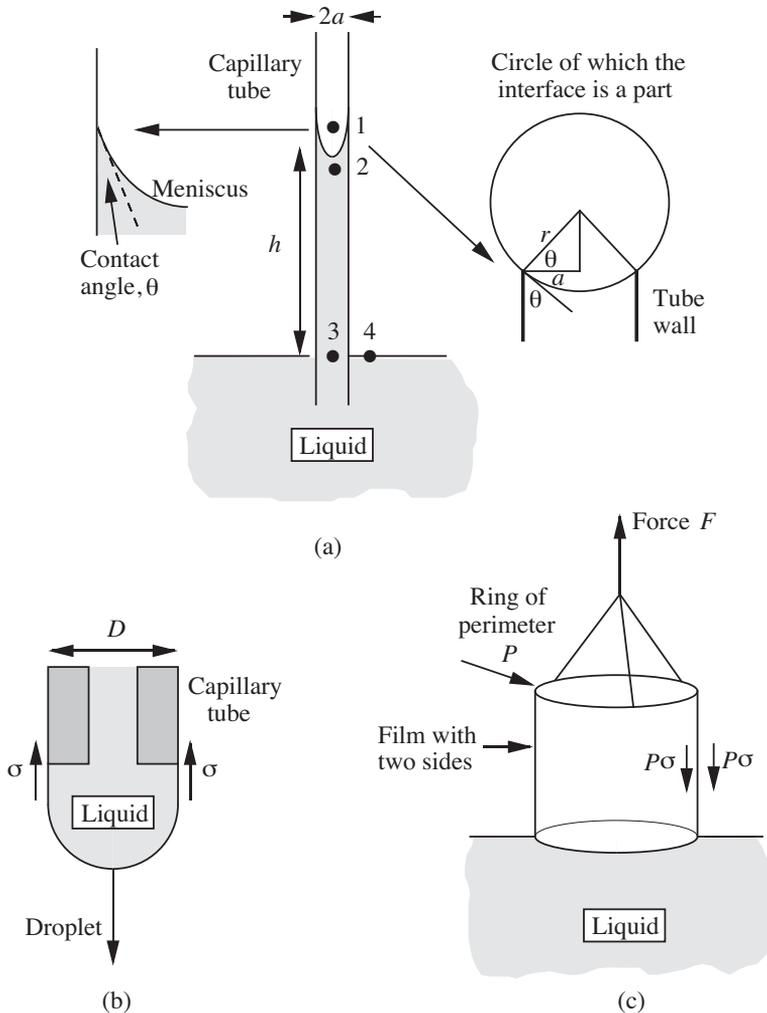


Fig. 1.12 Methods for measuring surface tension.

A brief description of simple experiments for measuring the surface tension σ of a liquid, shown in Fig. 1.12, now follows:

(a) In the *capillary-rise* method, a narrow tube of internal radius a is dipped vertically into a pool of liquid, which then rises to a height h inside the tube; if the *contact angle* (the angle between the free surface and the wall) is θ , the meniscus will be approximated by part of the surface of a sphere; from the geometry shown in the enlargement on the right-hand side of Fig. 1.12(a), the radius of the sphere is seen to be $r = a/\cos\theta$. Since the surface is now concave on the air side, the reverse of Eqn. (1.21) occurs, and $p_2 = p_1 - 2\sigma/r$, so that p_2 is *below* atmospheric pressure p_1 . Now follow the path 1–2–3–4, and observe that $p_4 = p_3$ because points

3 and 4 are at the same elevation in the same liquid. Thus, the pressure at point 4 is:

$$p_4 = p_1 - \frac{2\sigma}{r} + \rho gh.$$

However, $p_4 = p_1$ since both of these are at atmospheric pressure. Hence, the surface tension is given by the relation:

$$\sigma = \frac{1}{2}\rho ghr = \frac{\rho gha}{2\cos\theta}. \quad (1.23)$$

In many cases—for complete wetting of the surface— θ is essentially zero and $\cos\theta = 1$. However, for liquids such as mercury in glass, there may be a complete *non-wetting* of the surface, in which case $\theta = \pi$, so that $\cos\theta = -1$; the result is that the liquid level in the capillary is then *depressed* below that in the surrounding pool.

(b) In the *drop-weight* method, a liquid droplet is allowed to form very slowly at the tip of a capillary tube of outer diameter D . The droplet will eventually grow to a size where its weight just overcomes the surface-tension force $\pi D\sigma$ holding it up. At this stage, it will detach from the tube, and its weight $w = Mg$ can be determined by catching it in a small pan and weighing it. By equating the two forces, the surface tension is then calculated from:

$$\sigma = \frac{w}{\pi D}. \quad (1.24)$$

(c) In the *ring tensiometer*, a thin wire ring, suspended from the arm of a sensitive balance, is dipped into the liquid and gently raised, so that it brings a thin liquid film up with it. The force F needed to support the film is measured by the balance. The downward force exerted on a unit length of the ring by one side of the film is the surface tension; since there are two sides to the film, the total force is $2P\sigma$, where P is the circumference of the ring. The surface tension is therefore determined as:

$$\sigma = \frac{F}{2P}. \quad (1.25)$$

In common with most experimental techniques, all three methods described above require slight modifications to the results expressed in Eqns. (1.23)–(1.25) because of imperfections in the simple theories.

Surface tension generally appears only in situations involving either free surfaces (liquid/gas or liquid/solid boundaries) or interfaces (liquid/liquid boundaries); in the latter case, it is usually called the *interfacial* tension.

Representative values for the surface tensions of liquids at 20°C, in contact either with air or their vapor (there is usually little difference between the two), are given in Table 1.6.⁵

⁵ The values for surface tension have been obtained from the *CRC Handbook of Chemistry and Physics*, 48th ed., The Chemical Rubber Co., Cleveland, OH, 1967.

Table 1.6 *Surface Tensions*

<i>Liquid</i>	σ dynes/cm
Acetone	23.70
Benzene	28.85
Ethanol	22.75
Glycerol	63.40
Mercury	435.5
Methanol	22.61
<i>n</i> -Octane	21.80
Water	72.75

1.5 Units and Systems of Units

Mass, weight, and force. The *mass* M of an object is a measure of the amount of matter it contains and will be constant, since it depends on the number of constituent molecules and their masses. On the other hand, the *weight* w of the object is the gravitational force on it and is equal to Mg , where g is the local gravitational acceleration. Mostly, we shall be discussing phenomena occurring at the surface of the earth, where g is approximately $32.174 \text{ ft/s}^2 = 9.807 \text{ m/s}^2 = 980.7 \text{ cm/s}^2$. For much of this book, these values are simply taken as 32.2, 9.81, and 981, respectively.

Table 1.7 *Representative Units of Force*

<i>System</i>	<i>Units of Force</i>	<i>Customary Name</i>
SI	kg m/s ²	newton
CGS	g cm/s ²	dyne
FPS	lb _m ft/s ²	poundal

Newton's second law of motion states that a force F applied to a mass M will give it an acceleration a :

$$F = Ma, \quad (1.26)$$

from which is apparent that force has *dimensions* ML/T^2 . Table 1.7 gives the corresponding *units* of force in the SI (meter/kilogram/second), CGS (centimeter/gram/second), and FPS (foot/pound/second) systems.

The poundal is now an archaic unit, hardly ever used. Instead, the *pound force*, lb_f , is much more common in the English system; it is defined as the gravitational force on 1 lb_m , which, if left to fall freely, will do so with an acceleration of 32.2 ft/s^2 . Hence:

$$1 \text{ lb}_f = 32.2 \text{ lb}_m \frac{\text{ft}}{\text{s}^2} = 32.2 \text{ poundals.} \quad (1.27)$$

Table 1.8 SI Units

<i>Physical Quantity</i>	<i>Name of Unit</i>	<i>Symbol for Unit</i>	<i>Definition of Unit</i>
<i>Basic Units</i>			
Length	meter	m	—
Mass	kilogram	kg	—
Time	second	s	—
Temperature	degree Kelvin	K	—
<i>Supplementary Unit</i>			
Plane angle	radian	rad	—
<i>Derived Units</i>			
Acceleration			m/s^2
Angular velocity			rad/s
Density			kg/m^3
Energy	joule	J	$\text{kg m}^2/\text{s}^2$
Force	newton	N	kg m/s^2
Kinematic viscosity			m^2/s
Power	watt	W	$\text{kg m}^2/\text{s}^3$ (J/s)
Pressure	pascal	Pa	kg/m s^2 (N/m^2)
Velocity			m/s
Viscosity			kg/m s

When using lb_f in the $\text{ft}, \text{lb}_m, \text{s}$ (FPS) system, the following conversion factor, commonly called “ g_c ,” will almost invariably be needed:

$$g_c = 32.2 \frac{\text{lb}_m \text{ ft/s}^2}{\text{lb}_f} = 32.2 \frac{\text{lb}_m \text{ ft}}{\text{lb}_f \text{ s}^2}. \quad (1.28)$$

Some writers incorporate g_c into their equations, but this approach may be confusing, since it virtually implies that one particular set of units is being used and hence tends to rob the equations of their generality. Why not, for example, also incorporate the conversion factor of $144 \text{ in}^2/\text{ft}^2$ into equations where pressure is expressed in lb_f/in^2 ? We prefer to omit all conversion factors in equations and introduce them only as needed in evaluating expressions numerically. If the reader is in any doubt, units should *always* be checked when performing calculations.

SI units. The most systematically developed and universally accepted set of units occurs in the *SI* units or *Système International d'Unités*;⁶ the subset we mainly need is shown in Table 1.8.

The basic units are again the meter, kilogram, and second (m, kg, and s); from these, certain *derived* units can also be obtained. Force (kg m/s^2) has already been discussed; energy is the product of force and length; power amounts to energy per unit time; surface tension is energy per unit area or force per unit length, and so on. Some of the units have names, and these, together with their abbreviations, are also given in Table 1.8.

Table 1.9 *Auxiliary Units Allowed in Conjunction with SI Units*

<i>Physical Quantity</i>	<i>Name of Unit</i>	<i>Symbol for Unit</i>	<i>Definition of Unit</i>
Area	hectare	ha	10^4 m^2
Kinematic viscosity	stokes	St	$10^{-4} \text{ m}^2/\text{s}$
Length	micron	μm	10^{-6} m
Mass	tonne	t	$10^3 \text{ kg} = \text{Mg}$
	gram	g	$10^{-3} \text{ kg} = \text{g}$
Pressure	bar	bar	10^5 N/m^2
Viscosity	poise	P	10^{-1} kg/m s
Volume	liter	l	10^{-3} m^3

Tradition dies hard, and certain other “metric” units are so well established that they may be used as *auxiliary* units; these are shown in Table 1.9. The *gram* is the classic example. Note that the basic SI unit of mass (kg) is even represented in terms of the gram and has not yet been given a name of its own!

Table 1.10 shows some of the acceptable prefixes that can be used for accommodating both small and large quantities. For example, to avoid an excessive number of decimal places, 0.000001 s is normally better expressed as $1 \mu\text{s}$ (one microsecond). Note also, for example, that $1 \mu\text{kg}$ should be written as 1 mg —one prefix being better than two.

⁶ For an excellent discussion, on which Tables 1.8 and 1.9 are based, see *Metrication in Scientific Journals*, published by The Royal Society, London, 1968.

Table 1.10 Prefixes for Fractions and Multiples

<i>Factor</i>	<i>Name</i>	<i>Symbol</i>	<i>Factor</i>	<i>Name</i>	<i>Symbol</i>
10^{-12}	pico	p	10^3	kilo	k
10^{-9}	nano	n	10^6	mega	M
10^{-6}	micro	μ	10^9	giga	G
10^{-3}	milli	m	10^{12}	tera	T

Some of the more frequently used conversion factors are given in Table 1.11.

Example 1.1—Units Conversion

Part 1. Express 65 mph in (a) ft/s, and (b) m/s.

Solution

The solution is obtained by employing conversion factors taken from Table 1.11:

$$(a) \quad 65 \frac{\text{mile}}{\text{hr}} \times \frac{1}{3,600} \frac{\text{hr}}{\text{s}} \times 5,280 \frac{\text{ft}}{\text{mile}} = 95.33 \frac{\text{ft}}{\text{s}}.$$

$$(b) \quad 95.33 \frac{\text{ft}}{\text{s}} \times 0.3048 \frac{\text{m}}{\text{ft}} = 29.06 \frac{\text{m}}{\text{s}}.$$

Part 2. The density of 35°API crude oil is 53.1 lb_m/ft³ at 68°F, and its viscosity is 32.8 lb_m/ft hr. What are its density, viscosity, and kinematic viscosity in SI units?

Solution

$$\rho = 53.1 \frac{\text{lb}_m}{\text{ft}^3} \times 0.4536 \frac{\text{kg}}{\text{lb}_m} \times \frac{1}{0.3048^3} \frac{\text{ft}^3}{\text{m}^3} = 851 \frac{\text{kg}}{\text{m}^3}.$$

$$\mu = 32.8 \frac{\text{lb}_m}{\text{ft hr}} \times \frac{1}{2.419} \frac{\text{centipoise}}{\text{lb}_m/\text{ft hr}} \times 0.01 \frac{\text{poise}}{\text{centipoise}} = 0.136 \text{ poise}.$$

Or, converting to SI units, noting that P is the symbol for poise, and evaluating ν :

$$\mu = 0.136 \text{ P} \times 0.1 \frac{\text{kg/m s}}{\text{P}} = 0.0136 \frac{\text{kg}}{\text{m s}}.$$

$$\nu = \frac{\mu}{\rho} = \frac{0.0136 \text{ kg/m s}}{851 \text{ kg/m}^3} = 1.60 \times 10^{-5} \frac{\text{m}^2}{\text{s}} \quad (= 0.160 \text{ St}). \quad \square$$

Table 1.11 Commonly Used Conversion Factors

<i>Area</i>	1 mile ²	=	640 acres
	1 acre	=	0.4047 ha
<i>Energy</i>	1 BTU	=	1,055 J
	1 cal	=	4.184 J
	1 J	=	0.7376 ft lb _f
	1 erg	=	1 dyne cm
<i>Force</i>	1 lb _f	=	4.448 N
	1 N	=	0.2248 lb _f
<i>Length</i>	1 ft	=	0.3048 m
	1 m	=	3.281 ft
	1 mile	=	5,280 ft
<i>Mass</i>	1 lb _m	=	0.4536 kg
	1 kg	=	2.205 lb _m
<i>Power</i>	1 HP	=	550 ft lb _f /s
	1 kW	=	737.6 ft lb _f /s
<i>Pressure</i>	1 atm	=	14.696 lb _f /in ²
	1 atm	=	1.0133 bar
	1 atm	=	1.0133 × 10 ⁵ Pa
<i>Time</i>	1 day	=	24 hr
	1 hr	=	60 min
	1 min	=	60 s
<i>Viscosity</i>	1 cP	=	2.419 lb _m /ft hr
	1 cP	=	0.001 kg/m s
	1 cP	=	0.000672 lb _m /ft s
	1 lb _f s/ft ²	=	4.788 × 10 ⁴ cP
<i>Volume</i>	1 ft ³	=	7.481 U.S. gal
	1 U.S. gal	=	3.785 l
	1 m ³	=	264.2 U.S. gal

Example 1.2—Mass of Air in a Room

Estimate the mass of air in your classroom, which is 80 ft wide, 40 ft deep, and 12 ft high. The gas constant is $R = 10.73 \text{ psia ft}^3/\text{lb-mol } ^\circ\text{R}$.

Solution

The volume of the classroom, shown in Fig. E1.2, is:

$$V = 80 \times 40 \times 12 = 3.84 \times 10^4 \text{ ft}^3.$$

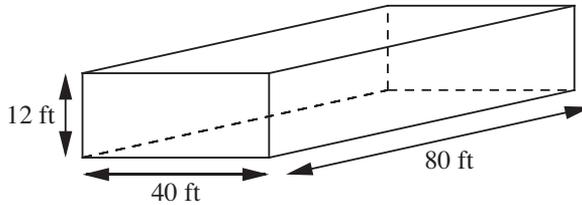


Fig. E1.2 Assumed dimensions of classroom.

If the air is approximately 20% oxygen and 80% nitrogen, its mean molecular weight is $M_w = 0.8 \times 28 + 0.2 \times 32 = 28.8 \text{ lb}_m/\text{lb-mol}$. From the gas law, assuming an absolute pressure of $p = 14.7 \text{ psia}$ and a temperature of $70^\circ\text{F} = 530^\circ\text{R}$, the density is:

$$\rho = \frac{M_w p}{RT} = \frac{28.8 \text{ (lb}_m/\text{lb mol)} \times 14.7 \text{ (psia)}}{10.73 \text{ (psia ft}^3/\text{lb mol } ^\circ\text{R)} \times 530 \text{ (}^\circ\text{R)}} = 0.0744 \text{ lb}_m/\text{ft}^3.$$

Hence, the mass of air is:

$$M = \rho V = 0.0744 \text{ (lb}_m/\text{ft}^3) \times 3.84 \times 10^4 \text{ (ft}^3) = 2,860 \text{ lb}_m. \quad \square$$

For the rest of the book, manipulation of units will often be less detailed; the reader should always check if there is any doubt.

1.6 Hydrostatics

Variation of pressure with elevation. Here, we investigate how the pressure in a stationary fluid varies with elevation z . The result is useful because it can answer questions such as “What is the pressure at the summit of Mt. Annapurna?” or “What forces are exerted on the walls of an oil storage tank?” Consider a hypothetical differential cylindrical element of fluid of cross-sectional area A , height dz , and volume $A dz$, which is also surrounded by the same fluid, as shown in Fig. 1.13. Its weight, being the downward gravitational force on its mass, is $dW = \rho A dz g$. Two completely equivalent approaches will be presented:

Method 1. Let p denote the pressure at the base of the cylinder; since p changes at a rate dp/dz with elevation, the pressure is found either from Taylor’s expansion or the definition of a derivative to be $p + (dp/dz)dz$ at the top of the cylinder.⁷ (Note that we do not anticipate a reduction of pressure with elevation here; hence, the plus sign is used. If, indeed—as proves to be the case—pressure falls with increasing elevation, then the subsequent development will tell us that

⁷ Further details of this fundamental statement can be found in Appendix A and *must* be fully understood, because similar assertions appear repeatedly throughout the book.

dp/dz is negative.) Hence, the fluid exerts an *upward* force of pA on the base of the cylinder and a *downward* force of $[p + (dp/dz)dz]A$ on the top of the cylinder.

Next, apply Newton's second law of motion by equating the net upward force to the mass times the acceleration—which is zero, since the cylinder is stationary:

$$\underbrace{pA - \left(p + \frac{dp}{dz} dz\right) A}_{\text{Net pressure force}} - \underbrace{\rho A dz g}_{\text{Weight}} = \underbrace{(\rho A dz)}_{\text{Mass}} \times 0 = 0. \quad (1.29)$$

Cancellation of pA and division by $A dz$ leads to the following *differential equation*, which governs the rate of change of pressure with elevation:

$$\frac{dp}{dz} = -\rho g. \quad (1.30)$$

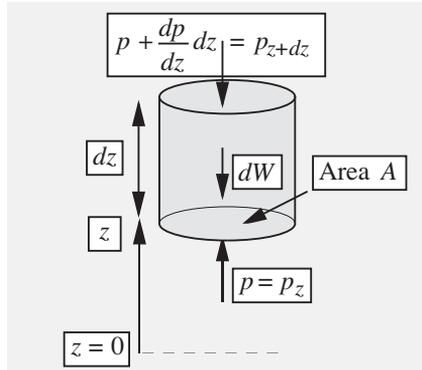


Fig. 1.13 Forces acting on a cylinder of fluid.

Method 2. Let p_z and p_{z+dz} denote the pressures at the base and top of the cylinder, where the elevations are z and $z+dz$, respectively. Hence, the fluid exerts an *upward* force of $p_z A$ on the base of the cylinder, and a *downward* force of $p_{z+dz} A$ on the top of the cylinder. Application of Newton's second law of motion gives:

$$\underbrace{p_z A - p_{z+dz} A}_{\text{Net pressure force}} - \underbrace{\rho A dz g}_{\text{Weight}} = \underbrace{(\rho A dz)}_{\text{Mass}} \times 0 = 0. \quad (1.31)$$

Isolation of the two pressure terms on the left-hand side and division by $A dz$ gives:

$$\frac{p_{z+dz} - p_z}{dz} = -\rho g. \quad (1.32)$$

As dz tends to zero, the left-hand side of Eqn. (1.32) becomes the derivative dp/dz , leading to the same result as previously:

$$\frac{dp}{dz} = -\rho g. \quad (1.30)$$

The same conclusion can also be obtained by considering a cylinder of *finite* height Δz and then letting Δz approach zero.

Note that Eqn. (1.30) predicts a pressure *decrease* in the vertically upward direction at a rate that is proportional to the local density. Such pressure variations can readily be detected by the ear when traveling quickly in an elevator in a tall building or when taking off in an airplane. The reader must thoroughly understand *both* the above approaches. For most of this book, we shall use Method 1, because it eliminates the steps of taking the limit of $dz \rightarrow 0$ and invoking the definition of the derivative.

Pressure in a liquid with a free surface. In Fig. 1.14, the pressure is p_s at the free surface, and we wish to find the pressure p at a depth H below the free surface—of water in a swimming pool, for example.

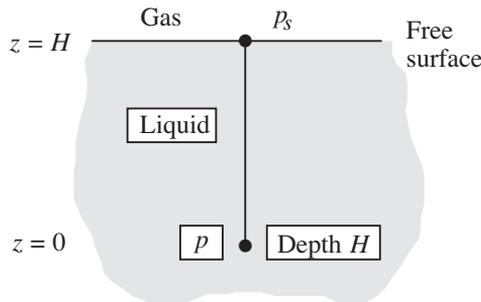


Fig. 1.14 Pressure at a depth H .

Separation of variables in Eqn. (1.30) and integration between the free surface ($z = H$) and a depth H ($z = 0$) gives:

$$\int_{p_s}^p dp = - \int_H^0 \rho g dz. \quad (1.33)$$

Assuming—quite reasonably—that ρ and g are constants in the liquid, these quantities may be taken outside the integral, yielding:

$$p = p_s + \rho g H, \quad (1.34)$$

which predicts a *linear* increase of pressure with distance downward from the free surface. For large depths, such as those encountered by deep-sea divers, very substantial pressures will result.



Example 1.3—Pressure in an Oil Storage Tank

What is the absolute pressure at the bottom of the cylindrical tank of Fig. E1.3, filled to a depth of H with crude oil, with its free surface exposed to the atmosphere? The specific gravity of the crude oil is 0.846. Give the answers for (a) $H = 15.0$ ft (pressure in lb_f/in^2) and (b) $H = 5.0$ m (pressure in Pa and bar). What is the purpose of the surrounding dike?

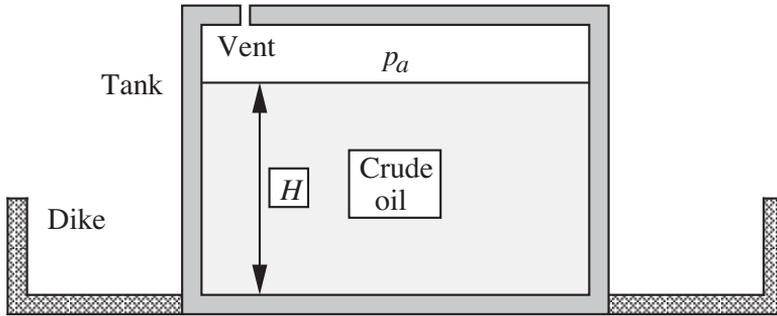


Fig. E1.3 Crude oil storage tank.

Solution

(a) The pressure is that of the atmosphere, p_a , plus the increase due to a column of depth $H = 15.0$ ft. Thus, setting $p_s = p_a$, Eqn. (1.34) gives:

$$\begin{aligned} p &= p_a + \rho g H \\ &= 14.7 + \frac{0.846 \times 62.3 \times 32.2 \times 15.0}{144 \times 32.2} \\ &= 14.7 + 5.49 = 20.2 \text{ psia.} \end{aligned}$$

The reader should check the units, noting that the 32.2 in the numerator is $g [=]$ ft/s^2 and that the 32.2 in the denominator is $g_c [=]$ $\text{lb}_m \text{ ft}/\text{lb}_f \text{ s}^2$.

(b) For SI units, no conversion factors are needed. Noting that the density of water is $1,000 \text{ kg}/\text{m}^3$ and that $p_a \doteq 1.01 \times 10^5 \text{ Pa}$ absolute:

$$p = 1.01 \times 10^5 + 0.846 \times 1,000 \times 9.81 \times 5.0 = 1.42 \times 10^5 \text{ Pa} = 1.42 \text{ bar.}$$

In the event of a tank rupture, the dike contains the leaking oil and facilitates prevention of spreading fire and contamination of the environment.

Epilogue

When he arrived at work in an oil refinery one morning, the author saw first-hand the consequences of an inadequately vented oil-storage tank. Rain during the night had caused partial condensation of vapor inside the tank, whose pressure had become sufficiently lowered so that the external atmospheric pressure had crumpled the steel tank just as if it were a flimsy tin can. The refinery manager was not pleased. \square

Example 1.4—Multiple Fluid Hydrostatics

The U-tube shown in Fig. E1.4 contains oil and water columns, between which there is a long trapped air bubble. For the indicated heights of the columns, find the specific gravity of the oil.

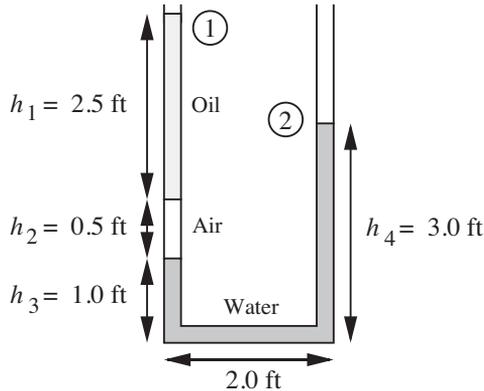


Fig. E1.4 Oil/air/water system.

Solution

The pressure p_2 at point 2 may be deduced by starting with the pressure p_1 at point 1 and adding or subtracting, as appropriate, the hydrostatic pressure changes due to the various columns of fluid. Note that the width of the U-tube (2.0 ft) is irrelevant, since there is no change in pressure in the horizontal leg. We obtain:

$$p_2 = p_1 + \rho_o g h_1 + \rho_a g h_2 + \rho_w g h_3 - \rho_w g h_4, \quad (\text{E1.4.1})$$

in which ρ_o , ρ_a , and ρ_w denote the densities of oil, air, and water, respectively. Since the density of the air is very small compared to that of oil or water, the term containing ρ_a can be neglected. Also, $p_1 = p_2$, because both are equal to atmospheric pressure. Equation (E1.4.1) can then be solved for the specific gravity s_o of the oil:

$$s_o = \frac{\rho_o}{\rho_w} = \frac{h_4 - h_3}{h_1} = \frac{3.0 - 1.0}{2.5} = 0.80. \quad \square$$

Pressure variations in a gas. For a gas, the density is no longer constant but is a function of pressure (and of temperature—although temperature variations are usually less significant than those of pressure), and there are two approaches:

1. For *small* changes in elevation, the assumption of constant density can still be made, and equations similar to Eqn. (1.34) are still approximately valid.
2. For moderate or large changes in elevation, the density in Eqn. (1.30) is given by Eqn. (1.7) or (1.8), $\rho = M_w p / RT$ or $\rho = M_w p / ZRT$, depending on whether

the gas is ideal or nonideal. It is understood that *absolute* pressure and temperature must *always* be used whenever the gas law is involved. A separation of variables can still be made, followed by integration, but the result will now be more complicated because the term dp/p occurs, leading—at the simplest (for an isothermal situation)—to a decreasing *exponential* variation of pressure with elevation.

Example 1.5—Pressure Variations in a Gas

For a gas of molecular weight M_w (such as the earth's atmosphere), investigate how the pressure p varies with elevation z if $p = p_0$ at $z = 0$. Assume that the temperature T is constant. What approximation may be made for *small* elevation increases? Explain how you would proceed for the nonisothermal case, in which $T = T(z)$ is a known function of elevation.

Solution

Assuming ideal gas behavior, Eqns. (1.30) and (1.7) give:

$$\frac{dp}{dz} = -\rho g = -\frac{M_w p}{RT} g. \quad (\text{E1.5.1})$$

Separation of variables and integration between appropriate limits yields:

$$\int_{p_0}^p \frac{dp}{p} = \ln \frac{p}{p_0} = - \int_0^z \frac{M_w g}{RT} dz = -\frac{M_w g}{RT} \int_0^z dz = -\frac{M_w g z}{RT}, \quad (\text{E1.5.2})$$

since $M_w g/RT$ is constant. Hence, there is an exponential decrease of pressure with elevation, as shown in Fig. E1.5:

$$p = p_0 \exp\left(-\frac{M_w g}{RT} z\right). \quad (\text{E1.5.3})$$

Since a Taylor's expansion gives $e^{-x} = 1 - x + x^2/2 - \dots$, the pressure is *approximated* by:

$$p \doteq p_0 \left[1 - \frac{M_w g}{RT} z + \left(\frac{M_w g}{RT}\right)^2 \frac{z^2}{2} \right]. \quad (\text{E1.5.4})$$

For *small* values of $M_w g z/RT$, the last term is an insignificant second-order effect (compressibility effects are unimportant), and we obtain:

$$p \doteq p_0 - \frac{M_w p_0}{RT} g z = p_0 - \rho_0 g z, \quad (\text{E1.5.5})$$

in which ρ_0 is the density at elevation $z = 0$; this approximation—essentially one of constant density—is shown as the dashed line in Fig. E1.5 and is clearly

applicable only for a small change of elevation. Problem 1.19 investigates the upper limit on z for which this linear approximation is realistic. If there are significant elevation changes—as in Problems 1.16 and 1.30—the approximation of Eqn. (E1.5.5) *cannot* be used with any accuracy. Observe with caution that the Taylor's expansion is only a vehicle for demonstrating what happens for small values of $M_w g z / RT$. Actual calculations for larger values of $M_w g z / RT$ should be made using Eqn. (E1.5.3), *not* Eqn. (E1.5.4).

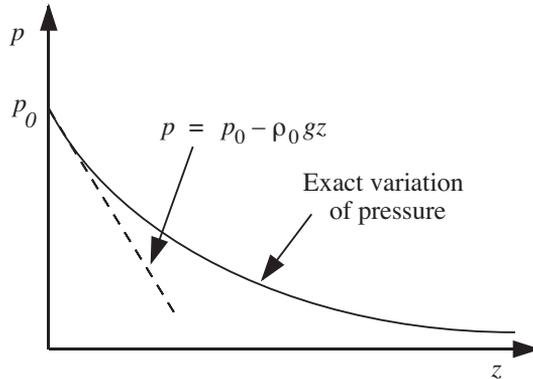


Fig. E1.5 Variation of gas pressure with elevation.

For the case in which the temperature is not constant, but is a known function $T(z)$ of elevation (as might be deduced from observations made by a meteorological balloon), it must be included *inside* the integral:

$$\int_{p_1}^{p_2} \frac{dp}{p} = -\frac{M_w g}{R} \int_0^z \frac{dz}{T(z)}. \quad (\text{E1.5.6})$$

Since $T(z)$ is unlikely to be a simple function of z , a numerical method—such as Simpson's rule in Appendix A—will probably have to be used to approximate the second integral of Eqn. (E1.5.6). \square

Total force on a dam or lock gate. Fig. 1.15 shows the side and end elevations of a dam or lock gate of depth D and width W . An expression is needed for the total horizontal force F exerted by the liquid on the dam, so that the latter can be made of appropriate strength. Similar results would apply for liquids in storage tanks. Gauge pressures are used for simplicity, with $p = 0$ at the free surface and in the air outside the dam. Absolute pressures could also be employed, but would merely add a constant atmospheric pressure everywhere, and would eventually be canceled out. If the coordinate z is measured from the bottom of the liquid upward, the corresponding *depth* of a point below the free surface is $D - z$. Hence, from Eqn. (1.34), the differential horizontal force dF on an infinitesimally small rectangular strip of area $dA = W dz$ is:

$$dF = pW dz = \rho g(D - z)W dz. \quad (1.35)$$

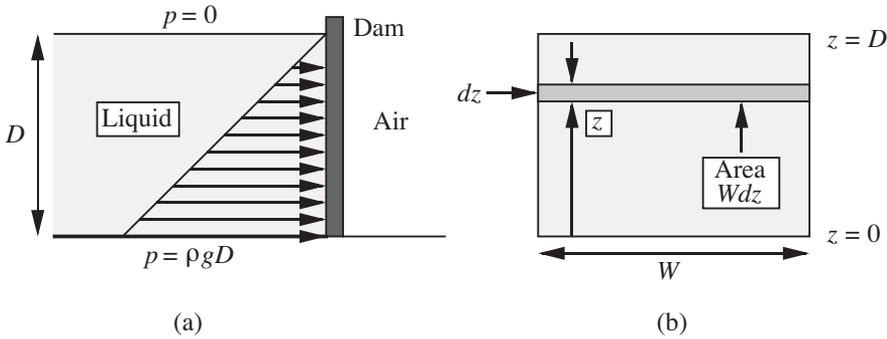


Fig. 1.15 Horizontal thrust on a dam:
 (a) side elevation, (b) end elevation.

Integration from the bottom ($z = 0$) to the top ($z = D$) of the dam gives the total horizontal force:

$$F = \int_0^D dF = \int_0^D \rho g W (D - z) dz = \frac{1}{2} \rho g W D^2. \quad (1.36)$$

Horizontal pressure force on an arbitrary plane vertical surface.

The preceding analysis was for a regular shape. A more general case is illustrated in Fig. 1.16, which shows a *plane* vertical surface of *arbitrary* shape. Note that it is now slightly easier to work in terms of a *downward* coordinate h .

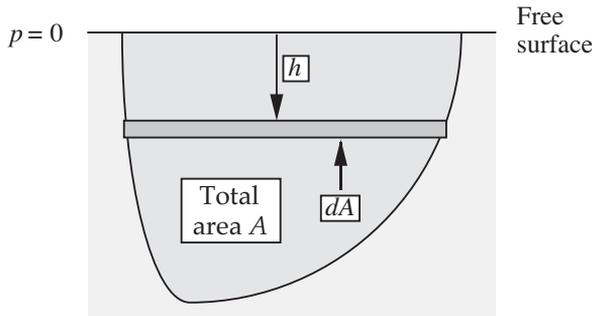


Fig. 1.16 Side view of a pool of liquid with a submerged vertical surface.

Again taking gauge pressures for simplicity (the gas law is not involved), with $p = 0$ at the free surface, the total horizontal force is:

$$F = \int_A p dA = \int_A \rho g h dA = \rho g A \frac{\int_A h dA}{A}. \quad (1.37)$$

But the depth h_c of the centroid of the surface is defined as:

$$h_c \equiv \frac{\int_A h dA}{A}. \quad (1.38)$$

Thus, from Eqns. (1.37) and (1.38), the total force is:

$$F = \rho g h_c A = p_c A, \tag{1.39}$$

in which p_c is the pressure at the centroid.

The advantage of this approach is that the location of the centroid is already known for several geometries. For example, for a rectangle of depth D and width W :

$$h_c = \frac{1}{2}D \quad \text{and} \quad F = \frac{1}{2}\rho g W D^2, \tag{1.40}$$

in agreement with the earlier result of Eqn. (1.36). Similarly, for a vertical circle that is just submerged, the depth of the centroid equals its radius. And, for a vertical triangle with one edge coincident with the surface of the liquid, the depth of the centroid equals one-third of its altitude.

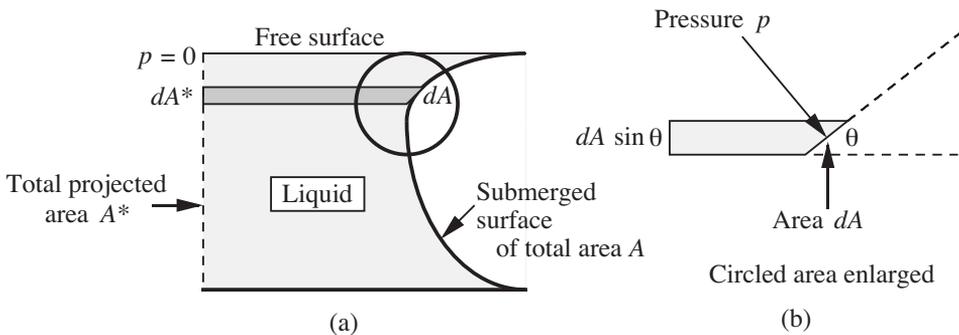


Fig. 1.17 Thrust on surface of uniform cross-sectional shape.

Horizontal pressure force on a curved surface. Fig. 1.17(a) shows the cross section of a submerged surface that is no longer plane. However, the shape is uniform normal to the plane of the diagram.

In general, as shown in Fig. 1.17(b), the local pressure force $p dA$ on an element of surface area dA does not act horizontally; therefore, its horizontal component must be obtained by projection through an angle of $(\pi/2 - \theta)$, by multiplying by $\cos(\pi/2 - \theta) = \sin \theta$. The total horizontal force F is then:

$$F = \int_A p \sin \theta dA = \int_{A^*} p dA^*, \tag{1.41}$$

in which $dA^* = dA \sin \theta$ is an element of the projection of A onto the hypothetical vertical plane A^* . The integral of Eqn. (1.41) can be obtained readily, as illustrated in the following example.

Example 1.6—Hydrostatic Force on a Curved Surface

A submarine, whose hull has a circular cross section of diameter D , is just submerged in water of density ρ , as shown in Fig. E1.6. Derive an equation that gives the total horizontal force F_x on the left half of the hull, for a distance W normal to the plane of the diagram. If $D = 8$ m, the circular cross section continues essentially for the total length $W = 50$ m of the submarine, and the density of sea water is $\rho = 1,026$ kg/m³, determine the total horizontal force on the left-hand half of the hull.

Solution

The force is obtained by evaluating the integral of Eqn. (1.41), which is identical to that for the rectangle in Fig. 1.15:

$$F_x = \int_{A^*} p dA = \int_{z=0}^{z=D} \rho g W (D - z) dz = \frac{1}{2} \rho g W D^2. \tag{E1.6.1}$$

Insertion of the numerical values gives:

$$F_x = \frac{1}{2} \times 1,026 \times 9.81 \times 50 \times 8.0^2 = 1.61 \times 10^7 \text{ N}. \tag{E1.6.2}$$

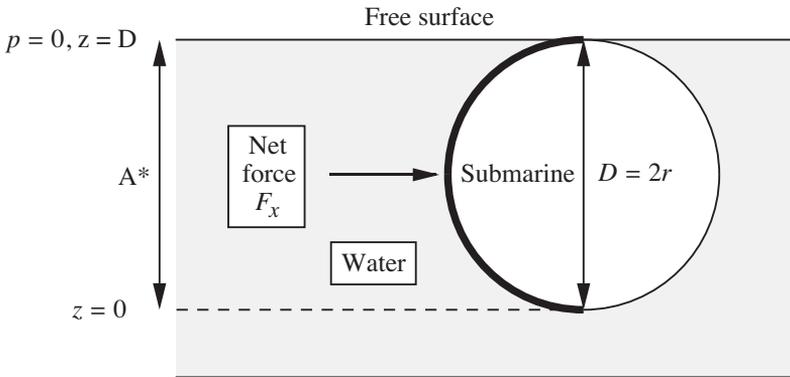


Fig. E1.6 Submarine just submerged in seawater.

Thus, the total force is considerable—about 3.62×10^6 lb_f. □



Archimedes, ca. 287–212 B.C. Archimedes was a Greek mathematician and inventor. He was born in Syracuse, Italy, where he spent much of his life, apart from a period of study in Alexandria. He was much more interested in mathematical research than any of the ingenious inventions that made him famous. One invention was a “burning mirror,” which focused the sun’s rays to cause intense heat. Another was the rotating Archimedean screw, for raising a continuous stream of water. Presented with a crown supposedly of pure gold, Archimedes tested the possibility that it might be “diluted” by silver by separately immersing the crown and an equal weight of pure gold into his bath, and observed the difference in the overflow. Legend has it that he was so excited by the result that he ran home without his clothes, shouting “*εὕρηκα, εὕρηκα*”, “I have found it, I have found it.” To dramatize the effect of a lever, he said, “Give me a place to stand, and I will move the earth.” He considered his most important intellectual contribution to be the determination of the ratio of the volume of a sphere to the volume of the cylinder that circumscribes it. [Now that calculus has been invented, the reader might like to derive this ratio!] Sadly, Archimedes was killed during the capture of Syracuse by the Romans.

Source: *The Encyclopædia Britannica*, 11th ed., Cambridge University Press (1910–1911).

Buoyancy forces. If an object is submerged in a fluid, it will experience a net upward or *buoyant* force exerted by the fluid. To find this force, first examine the buoyant force on a submerged circular cylinder of height H and cross-sectional area A , shown in Fig. 1.18.

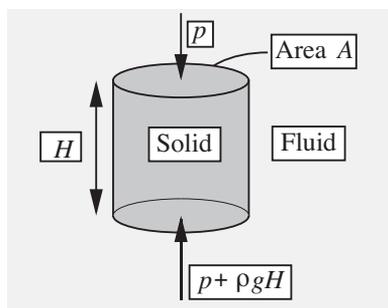


Fig. 1.18 Pressure forces on a submerged cylinder.

The forces on the curved vertical surface act horizontally and may therefore be ignored. Hence, the net *upward* force due to the difference between the opposing pressures on the bottom and top faces is:

$$F = (p + \rho gH - p)A = \rho HAg, \quad (1.42)$$

which is exactly the weight of the displaced liquid, thus verifying *Archimedes' law*, (the buoyant force equals the weight of the fluid displaced) for the cylinder. The same result would clearly be obtained for a cylinder of any uniform cross section.

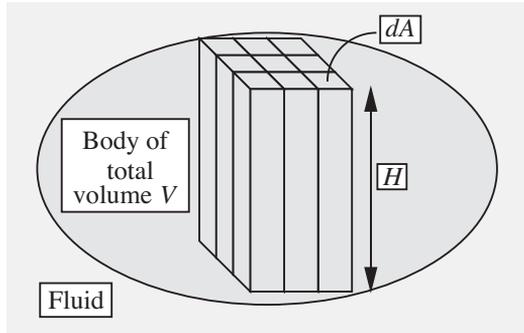


Fig. 1.19 Buoyancy force for an arbitrary shape.

Fig. 1.19 shows a more general situation, with a body of arbitrary shape. However, Archimedes' law still holds since the body can be decomposed into an infinitely large number of vertical rectangular parallelepipeds or "boxes" of infinitesimally small cross-sectional area dA . The effect for one box is then summed or "integrated" over all the boxes and again gives the net upward buoyant force as the weight of the liquid displaced.

Example 1.7—Application of Archimedes' Law

Consider the situation in Fig. E1.7(a), in which a barrel rests on a raft that floats in a swimming pool. The barrel is then pushed off the raft and may either float or sink, depending on its contents and hence its mass. The cross-hatching shows the volumes of water that are displaced. For each of the cases shown in Fig. E1.7 (b) and (c), determine whether the water level in the pool will rise, fall, or remain constant, relative to the initial level in (a).

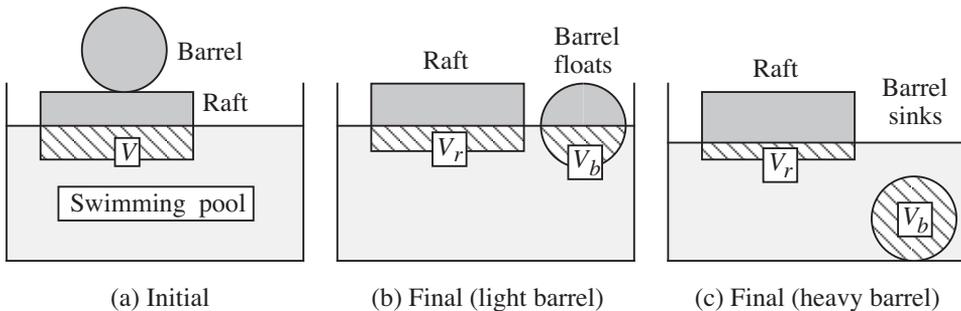


Fig. E1.7 Raft and barrel in swimming pool: (a) initial positions, (b) light barrel rolls off and floats, (c) heavy barrel rolls off and sinks. The cross-hatching shows volumes below the surface of the water.

Solution

Initial state. Let the masses of the raft and barrel be M_r and M_b , respectively. If the volume of displaced water is initially V in (a), Archimedes' law requires that the total weight of the raft and barrel equals the weight of the displaced water, whose density is ρ :

$$(M_r + M_b)g = V\rho g. \quad (\text{E1.7.1})$$

Barrel floats. If the barrel floats, as in (b), with submerged volumes of V_r and V_b for the raft and barrel, respectively, Archimedes' law may be applied to the raft and barrel separately:

$$\text{Raft : } M_r g = V_r \rho g, \quad \text{Barrel : } M_b g = V_b \rho g. \quad (\text{E1.7.2})$$

Addition of the two equations (E1.7.2) and comparison with Eqn. (E1.7.1) shows that:

$$V_r + V_b = V. \quad (\text{E1.7.3})$$

Therefore, since the volume of the water is constant, and the total displaced volume does not change, the level of the surface also remains *unchanged*.

Barrel sinks. Archimedes' law may still be applied to the raft, but the weight of the water displaced by the barrel no longer suffices to support the weight of the barrel, so that:


$$\text{Raft : } M_r g = V_r \rho g, \quad \text{Barrel : } M_b g > V_b \rho g. \quad (\text{E1.7.4})$$

Addition of the two relations in (E1.7.4) and comparison with Eqn. (E1.7.1) shows that:

$$V_r + V_b < V. \quad (\text{E1.7.5})$$

Therefore, since the volume of the water in the pool is constant, and the total displaced volume is *reduced*, the level of the surface *falls*. This result is perhaps contrary to intuition: since the *whole* volume of the barrel is submerged in (c), it might be thought that the water level will rise above that in (b). However, because the barrel must be heavy in order to sink, the load on the raft and hence V_r are substantially reduced, so that the total displaced volume is also reduced.

This problem illustrates the need for a complete analysis rather than jumping to a possibly erroneous conclusion. \square

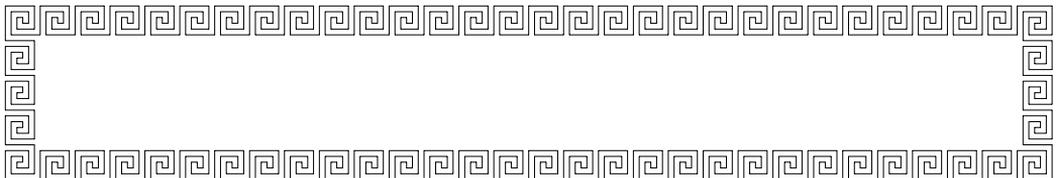

1.7 Pressure Change Caused by Rotation

Finally, consider the shape of the free surface for the situation shown in Fig. 1.20(a), in which a cylindrical container, partly filled with liquid, is rotated with an angular velocity ω —that is, at $N = \omega/2\pi$ revolutions per unit time. The analysis has applications in fuel tanks of spinning rockets, centrifugal filters, and liquid mirrors.

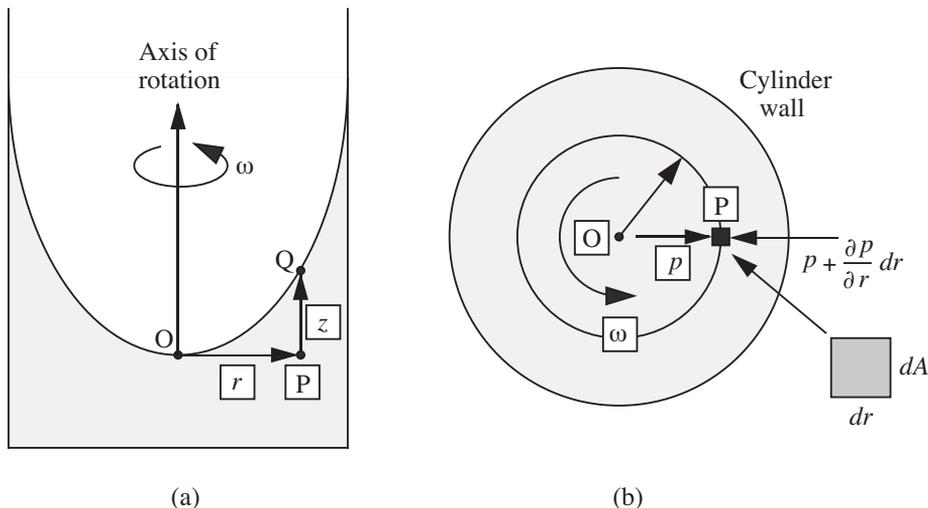


Fig. 1.20 Pressure changes for rotating cylinder: (a) elevation, (b) plan.

Point O denotes the origin, where $r = 0$ and $z = 0$. After a sufficiently long time, the rotation of the container will be transmitted by viscous action to the liquid, whose rotation is called a *forced vortex*. In fact, the liquid spins as if it were a *solid body*, rotating with a uniform angular velocity ω , so that the velocity in the direction of rotation at a radial location r is given by $v_\theta = r\omega$. It is therefore appropriate to treat the situation similar to the hydrostatic investigations already made.

Suppose that the liquid element P is essentially a rectangular box with cross-sectional area dA and radial extent dr . (In reality, the element has slightly tapering sides, but a more elaborate treatment taking this into account will yield identical results to those derived here.) The pressure on the inner face is p , whereas that on the outer face is $p + (\partial p/\partial r)dr$. Also, for uniform rotation in a circular path of radius r , the acceleration toward the center O of the circle is $r\omega^2$. Newton's second law of motion is then used for equating the net pressure force toward O to the mass of the element times its acceleration:

$$\underbrace{\left(p + \frac{\partial p}{\partial r}dr - p\right)}_{\text{Net pressure force}} dA = \underbrace{\rho(dA dr)}_{\text{Mass}} r\omega^2. \quad (1.43)$$

Note that the use of a *partial* derivative is essential, since the pressure now varies in both the horizontal (radial) *and* vertical directions. Simplification yields the variation of pressure in the radial direction:

$$\frac{\partial p}{\partial r} = \rho r \omega^2, \quad (1.44)$$

so that pressure *increases* in the radially outward direction.

Observe that the gauge pressure at all points on the interface is zero; in particular, $p_O = p_Q = 0$. Integrating from points O to P (at constant z):

$$\int_{p=0}^{p_P} dp = \rho \omega^2 \int_0^r r dr, \\ p_P = \frac{1}{2} \rho \omega^2 r^2. \quad (1.45)$$

However, the pressure at P can also be obtained by considering the usual hydrostatic increase in traversing the path QP:

$$p_P = \rho g z. \quad (1.46)$$

Elimination of the intermediate pressure p_P between Eqns. (1.45) and (1.46) relates the elevation of the free surface to the radial location:

$$z = \frac{\omega^2 r^2}{2g}. \quad (1.47)$$

Thus, the free surface is *parabolic* in shape; observe also that the density is not a factor, having been canceled from the equations.

There is another type of vortex—the *free* vortex—that is also important, in cyclone dust collectors and tornadoes, for example, as discussed in Chapters 4 and 7. There, the velocity in the angular direction is given by $v_\theta = c/r$, where c is a constant, so that v_θ is inversely proportional to the radial position.

Example 1.8—Overflow from a Spinning Container

A cylindrical container of height H and radius a is initially half-filled with a liquid. The cylinder is then spun steadily around its vertical axis Z - Z , as shown in Fig. E1.8. At what value of the angular velocity ω will the liquid just start to spill over the top of the container? If $H = 1$ ft and $a = 0.25$ ft, how many rpm (revolutions per minute) would be needed?

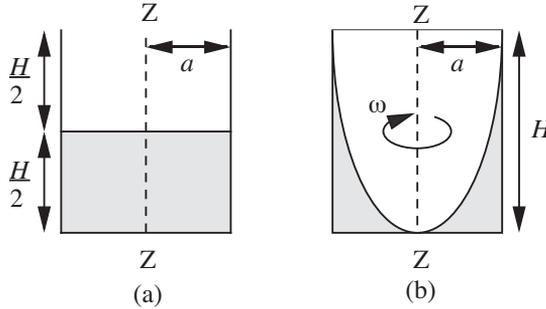


Fig. E1.8 Geometry of a spinning container:
(a) at rest, (b) on the point of overflowing.

Solution

From Eqn. (1.47), the shape of the free surface is a parabola. Therefore, the air inside the rotating cylinder forms a paraboloid of revolution, whose volume is known from calculus to be exactly one-half of the volume of the “circumscribing cylinder,” namely, the container.⁸ Hence, the liquid at the center reaches the bottom of the cylinder *just* as the liquid at the curved wall reaches the top of the cylinder. In Eqn. (1.47), therefore, set $z = H$ and $r = a$, giving the required angular velocity:

$$\omega = \sqrt{\frac{2gH}{a^2}}.$$

For the stated values:

$$\omega = \sqrt{\frac{2 \times 32.2 \times 1}{0.25^2}} = 32.1 \frac{\text{rad}}{\text{s}}, \quad N = \frac{\omega}{2\pi} = \frac{32.1 \times 60}{2\pi} = 306.5 \text{ rpm.} \quad \square$$

⁸ Proof can be accomplished as follows. First, note for the parabolic surface in Fig. E1.8(b), $r = a$ when $z = H$, so, from Eqn. (1.47), $\omega^2/2g = H/a^2$. Thus, Eqn. (1.47) can be rewritten as:

$$z = H \frac{r^2}{a^2}.$$

The volume of the paraboloid of air within the cylinder is therefore:

$$V = \int_{z=0}^{z=H} \pi r^2 dz = \int_{z=0}^{z=H} \frac{\pi a^2 z}{H} dz = \frac{1}{2} \pi a^2 H,$$

which is exactly one-half of the volume of the cylinder, $\pi a^2 H$. Since the container was initially just half filled, the liquid volume still accounts for the remaining half.

PROBLEMS FOR CHAPTER 1

- 1. Units conversion—E.** How many cubic feet are there in an acre-foot? How many gallons? How many cubic meters? How many tonnes of water?
- 2. Units conversion—E.** The viscosity μ of an oil is 10 cP, and its specific gravity s is 0.8. Reexpress both of these (the latter as density ρ) in both the lb_m, ft, s system and in SI units.
- 3. Units conversion—E.** Use conversion factors to express: (a) the gravitational acceleration of 32.174 ft/s² in SI units, and (b) a pressure of 14.7 lb_f/in² (one atmosphere) in both pascals and bars.
- 4. Meteorite density—E.** The Barringer Crater in Arizona was formed 30,000 years ago by a spherical meteorite of diameter 60 m and mass 10⁶ t (tonnes), traveling at 15 km/s when it hit the ground.⁹ (Clearly, all figures are *estimates*.) What was the mean density of the meteorite? What was the predominant material in the meteorite? Why? If one tonne of the explosive TNT is equivalent to five billion joules, how many tonnes of TNT would have had the same impact as the meteorite?
- 5. Reynolds number—E.** What is the mean velocity u_m (ft/s) and the Reynolds number $Re = \rho u_m D / \mu$ for 35 gpm (gallons per minute) of water flowing in a 1.05-in. I.D. pipe if its density is $\rho = 62.3$ lb_m/ft³ and its viscosity is $\mu = 1.2$ cP? What are the units of the Reynolds number?
- 6. Pressure in bubble—E.** Consider a *soap-film bubble* of diameter d . If the external air pressure is p_a , and the surface tension of the soap film is σ , derive an expression for the pressure p_b inside the bubble. *Hint:* Note that there are *two* air/liquid interfaces.

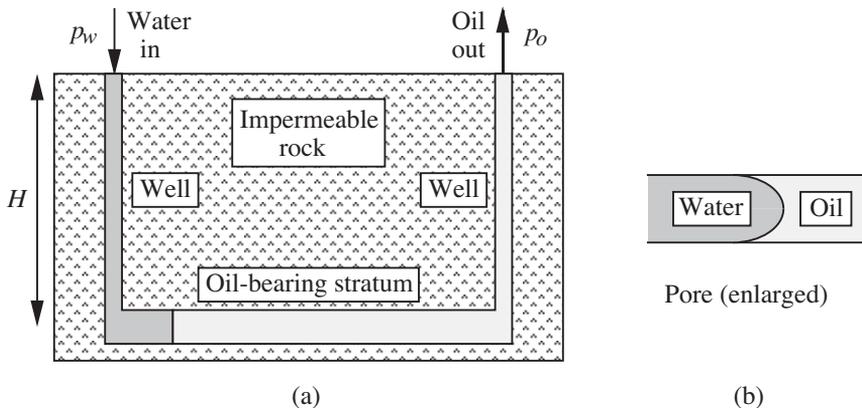


Fig. P1.7 Waterflooding of an oil reservoir.

⁹ Richard A.F. Grieve, "Impact cratering on the earth," *Scientific American*, Vol. 262, No. 4, p. 68 (1990).

7. *Reservoir waterflooding—E.* Fig. P1.7(a) shows how water is pumped down one well, of depth H , into an oil-bearing stratum, so that the displaced oil then flows up through another well. Fig. P1.7(b) shows an enlargement of an idealized pore, of diameter d , at the water/oil interface.

If the water and oil are *just* starting to move, what water inlet pressure p_w is needed if the oil exit pressure is to be p_o ? Assume that the oil completely wets the pore (*not* always the case), that the water/oil interfacial tension is σ , and that the densities of the water and oil are ρ_w and ρ_o , respectively.¹⁰

8. *Barometer reading—M.* In your house (elevation 950 ft above sea level) you have a barometer that registers inches of mercury. On an average day in January, you telephone the weather station (elevation 700 ft) and are told that the exact pressure there is 0.966 bar. What is the correct reading for your barometer, and to how many psia does this correspond? The specific gravity of mercury is 13.57.

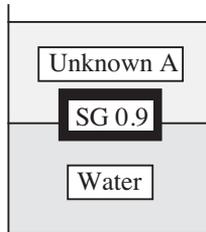


Fig. P1.9 Cylinder immersed in water and liquid A.

9. *Two-layer buoyancy—E.* As shown in Fig. P1.9, a layer of an unknown liquid A (immiscible with water) floats on top of a layer of water W in a beaker. A completely submerged cylinder of specific gravity 0.9 adjusts itself so that its axis is vertical and two-thirds of its height projects above the A/W interface and one-third remains below. What is the specific gravity of A? Solve the problem two ways—first using Archimedes' law and then using a momentum or force balance.

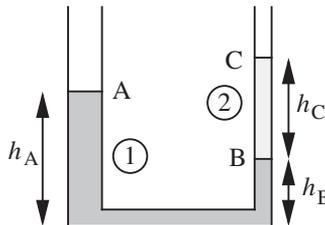


Fig. P1.10 U-tube with immiscible liquids.

10. *Differential manometer—E.* The U-tube shown in Fig. P1.10 has legs of *unequal* internal diameters d_1 and d_2 , which are partly filled with immiscible liquids of densities ρ_1 and ρ_2 , respectively, and are open to the atmosphere at the top.

¹⁰ D.L. Katz et al., *Handbook of Natural Gas Engineering*, McGraw-Hill, New York, 1959, p. 57, indicates a wide range of wettability by water, varying greatly with the particular rock formation.

If an *additional* small volume v_2 of the second liquid is added to the right-hand leg, derive an expression—in terms of ρ_1 , ρ_2 , v_2 , d_1 , and d_2 —for δ , the amount by which the level at B will fall. If ρ_1 is known, but ρ_2 is unknown, could the apparatus be used for determining the density of the second liquid?

Hints: The lengths h_A , h_B , and h_C have been included just to get started; they must not appear in the final result. After adding the second liquid, consider h_C to have increased by a length Δ —a quantity that must also eventually be eliminated.

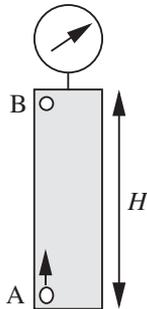


Fig. P1.11 Bubble rising in a closed cylinder.

11. Ascending bubble—E. As shown in Fig. P1.11, a hollow vertical cylinder with *rigid* walls and of height H is closed at both ends and is filled with an *incompressible* oil of density ρ . A gauge registers the pressure at the top of the cylinder. When a small bubble of volume v_0 initially adheres to point A at the bottom of the cylinder, the gauge registers a pressure p_0 . The gas in the bubble is ideal and has a molecular weight of M_w . The bubble is liberated by tapping on the cylinder and rises to point B at the top. The temperature T is constant throughout. Derive an expression in terms of any or all of the specified variables for the new pressure-gauge reading p_1 at the top of the cylinder.

12. Ship passing through locks—M. A ship of mass M travels uphill through a series of identical rectangular locks, each of equal superficial (bird's-eye view) area A and elevation change h . The steps involved in moving from one lock to the next (1 to 2, for example) are shown as A–B–C in Fig. P1.12. The lock at the top of the hill is supplied by a source of water. The initial depth in lock 1 is H , and the density of the water is ρ .

- Derive an expression for the increase in mass of water in lock 1 for the sequence shown in terms of some or all of the variables M , H , h , A , ρ , and g .
- If, after reaching the top of the hill, the ship descends through a similar series of locks to its original elevation, again derive an expression for the mass of water gained by a lock from the lock immediately above it.
- Does the mass of water to be supplied depend on the mass of the ship if: (i) it travels only uphill, (ii) it travels uphill, then downhill? Explain your answer.

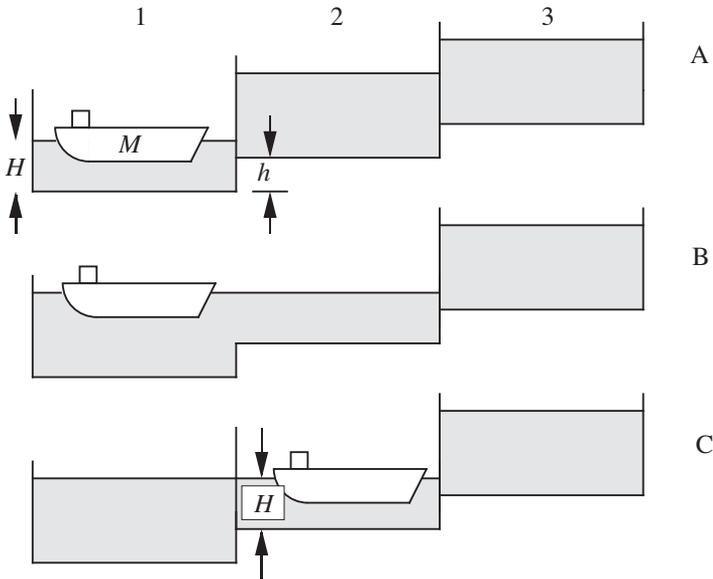


Fig. P1.12 Ship and locks.

13. Furnace stack—E. Air ($\rho_a = 0.08 \text{ lb}_m/\text{ft}^3$) flows through a furnace where it is burned with fuel to produce a hot gas ($\rho_g = 0.05 \text{ lb}_m/\text{ft}^3$) that flows up the stack, as in Fig. P1.13. The pressures in the gas and the immediately surrounding air at the top of the stack at point A are equal.

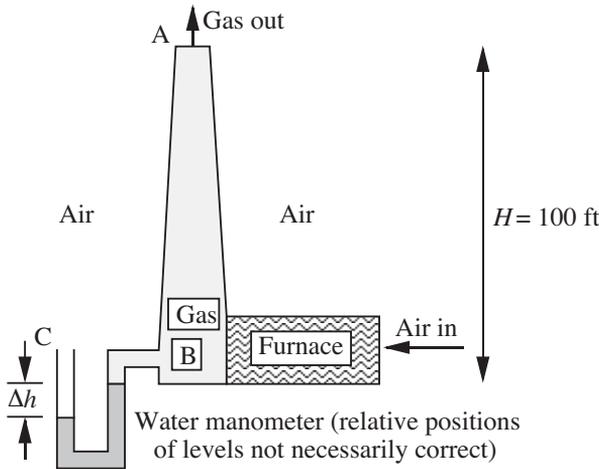


Fig. P1.13 Furnace stack.

What is the difference Δh (in.) in levels of the water in the manometer connected between the base B of the stack and the outside air at point C? Which side rises? Except for the pressure drop across the furnace (which you need not

worry about), treat the problem as one in hydrostatics. That is, ignore any frictional effects and kinetic energy changes in the stack. Also, neglect compressibility effects.

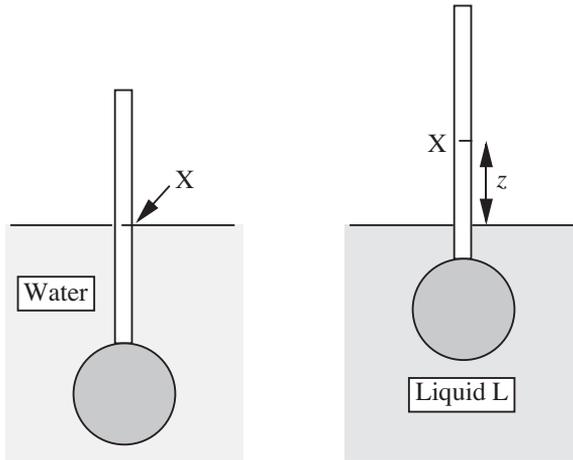


Fig. P1.14 Hydrometer in water and test liquid L .

14. Hydrometer— E . When a hydrometer floats in water, its cylindrical stem is submerged so that a certain point X on the stem is level with the free surface of the water, as shown in Fig. P1.14. When the hydrometer is placed in another liquid L of specific gravity s , the stem rises so that point X is now a height z above the free surface of L .

Derive an equation giving s in terms of z . If needed, the cross-sectional area of the stem is A , and when in water a total volume V (stem plus bulb) is submerged.

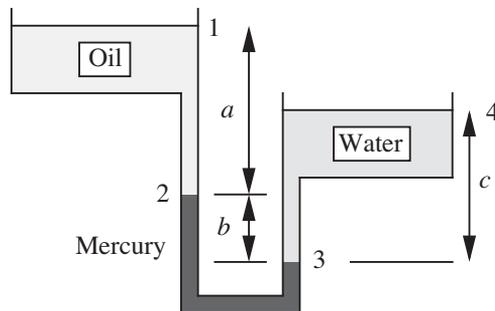


Fig. P1.15 Oil/mercury/water system.

15. Three-liquid manometer— E . In the hydrostatic case shown in Fig. P1.15, $a = 6$ ft and $c = 4$ ft. The specific gravities of oil, mercury, and water are $s_o = 0.8$, $s_m = 13.6$, and $s_w = 1.0$. Pressure variations in the air are negligible. What is the difference b in inches between the mercury levels, and which leg of the manometer has the higher mercury level? *Note:* In this latter respect, the diagram may not be correct.

16. Pressure on Mt. Erebus—M. On page 223 of the biography *Shackleton* (by Roland Huntford, Atheneum, New York, 1986), the Antarctic explorer's colleague, Edward Marshall, is reported as having "fixed the altitude [of Mt. Erebus] by hypsometer. This was simply a small cylinder in which distilled water was boiled and the temperature measured. It was then the most accurate known method of measuring altitude. The summit of Erebus turned out to be 13,500 feet above sea level."¹¹

Assuming a uniform (mean) air temperature of -5°F (the summer *summit* temperature is -30°F) and a sea-level pressure of 13.9 psia, at what temperature did the water boil in the hypsometer? At temperatures $T = 160, 170, 180, 190, 200,$ and 210°F , the respective vapor pressures of water are $p_v = 4.741, 5.992, 7.510, 9.339, 11.526,$ and 14.123 psia.

17. Oil and gas well pressures—M. A pressure gauge at the top of an oil well 18,000 ft deep registers 2,000 psig. The bottom 4,000-ft portion of the well is filled with oil ($s = 0.70$). The remainder of the well is filled with natural gas ($T = 60^{\circ}\text{F}$, compressibility factor $Z = 0.80$, and $s = 0.65$, meaning that the molecular weight is 0.65 times that of air).

Calculate the pressure (psig) at (a) the oil/gas interface, and (b) the bottom of the well.

18. Thrust on a dam—E. Concerning the thrust on a rectangular dam, check that Eqn. (1.36) is still obtained if, instead of employing an upward coordinate z , use is made of a *downward* coordinate h (with $h = 0$ at the free surface).

19. Pressure variations in air—M. Refer to Example 1.5 concerning the pressure variations in a gas, and assume that you are dealing with air at 40°F . Suppose further that you are using just the linear part of the expansion (up to the term in z) to calculate the absolute pressure at an elevation z above ground level. How large can z be, in miles, with the knowledge that the error amounts to no more than 1% of the exact value?

20. Grand Coulee dam—E. The Grand Coulee dam, which first operated in 1941, is 550 ft high and 3,000 ft wide. What is the pressure at the base of the dam, and what is the total horizontal force F lb_f exerted on it by the water upstream?

21. Force on V-shaped dam—M. A vertical dam has the shape of a V that is 3 m high and 2 m wide at the top, which is just level with the surface of the water upstream of the dam. Use two different methods to determine the total force (N) exerted by the water on the dam.

22. Rotating mercury mirror—M. Physicist Ermanno Borra, of Laval University in Quebec, has made a 40-in. diameter telescopic mirror from a pool of

¹¹ A more recent value is thought to be 12,450 feet.

mercury that rotates at one revolution every six seconds.¹² (Air bearings eliminate vibration, and a thin layer of oil prevents surface ripples.)

By what value Δz would the surface at the center be depressed relative to the perimeter, and what is the focal length (m) of the mirror? The mirror cost Borra \$7,500. He estimated that a similar 30-meter mirror could be built for \$7.5 million. If the focal length were unchanged, what would be the new value of Δz for the larger mirror? *Hint*: the equation for a parabola of focal length f is $r^2 = 4fz$.

23. *Oil and water in rotating container—E.* A cylindrical container partly filled with immiscible layers of water and oil is placed on a rotating turntable. Develop the necessary equations and prove that the shapes of the oil/air and water/oil interfaces are identical.

24. *Energy to place satellite in orbit—M.* “NASA launched a \$195 million astronomy satellite at the weekend to probe the enigmatic workings of neutron stars, black holes, and the hearts of galaxies at the edge of the universe . . . The long-awaited mission began at 8:48 a.m. last Saturday when the satellite’s Delta-2 rocket blasted off from the Cape Canaveral Air Station.”¹³

This “X-ray Timing Explorer satellite” was reported as having a mass of 6,700 lb_m and being placed 78 minutes after lift-off into a 360-mile-high circular orbit (measured above the earth’s surface).

How much energy (J) went directly to the satellite to place it in orbit? What was the corresponding average power (kW)? The force of attraction between a mass m and the mass M_e of the earth is GmM_e/r^2 , where r is the distance of the mass from the center of the earth and G is the universal gravitational constant. The value of G is *not* needed in order to solve the problem, as long as you remember that the radius of the earth is 6.37×10^6 m and that $g = 9.81$ m/s² at its surface.

25. *Central-heating loop—M.* Fig. P1.25 shows a piping “loop” that circulates hot water through the system ABCD in order to heat two floors of a house by means of baseboard fins attached to the horizontal runs of pipe (BC and DA). The horizontal and vertical portions of the pipes have lengths L and H , respectively.

The water, which has a mean density of $\bar{\rho}$ and a volume coefficient of expansion α , circulates by the action of natural convection due to a small heater, whose inlet and outlet water temperatures are T_1 and T_2 , respectively. The pressure drop due to friction per unit length of piping is cu^2/D , where c is a known constant, u is the mean water velocity, and D is the internal diameter of the pipe. You may assume that the vertical legs AB and CD are insulated and that equal amounts of heat are dissipated on each floor.

Derive an expression that gives the volumetric circulation rate of water, Q , in terms of c , D , $\bar{\rho}$, α , g , L , H , T_1 , and T_2 .

¹² *Scientific American*, February 1994, pp. 76–81. There is also earlier mention of his work in *Time*, December 15, 1986.

¹³ *Manchester Guardian Weekly*, January 7, 1996.

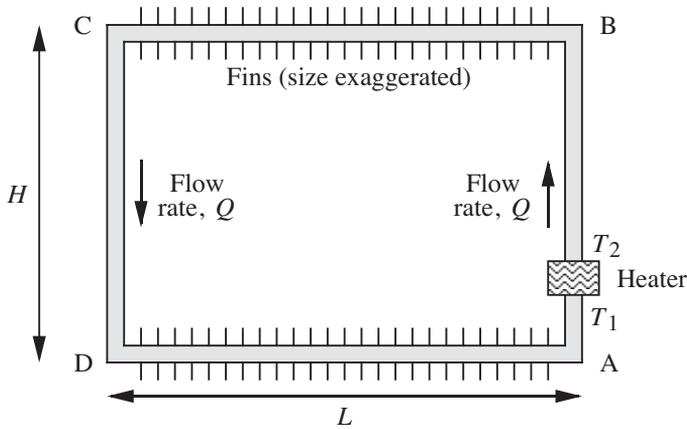


Fig. P1.25 Central-heating loop.

26. Pressure at the center of the earth— M . Prove that the pressure at the center of the earth is given by $p_c = 3Mg_s/8\pi R^2$, in which g_s is the gravitational acceleration at the surface, M is the mass of the earth, and R is its radius. *Hints:* Consider a small mass m inside the earth, at a radius r from the center. The force of attraction mg_r (where g_r is the local gravitational acceleration) between m and the mass M_r enclosed within the radius r is GmM_r/r^2 , where G is the universal gravitational constant. Repeat for the mass at the surface, and hence show that $g_r/g_s = r/R$. Then invoke hydrostatics.

If the radius of the earth is $R = 6.37 \times 10^6$ m, and its mean density is approximately $5,500 \text{ kg/m}^3$, estimate p_c in Pa and psi.

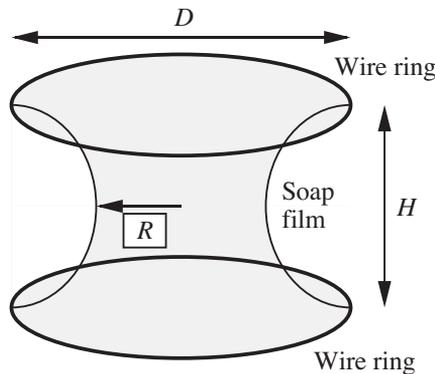


Fig. P1.27 Soap film on two rings.

27. Soap film on wire rings— M . As shown in Fig. P1.27, a soap film is stretched between two wire rings, each of diameter D and separated by a distance H . Prove that the radius R of the film at its narrowest point is:

$$R = \frac{1}{6} \left(2D + \sqrt{D^2 - 3H^2} \right).$$

You may assume that a section of the soap film is a circular arc and that $D \geq \sqrt{3} H$. What might happen if D is less than $\sqrt{3} H$?

Clearly stating your assumptions, derive an expression for the radius, in terms of D and H . Is your expression exact or approximate? Explain.

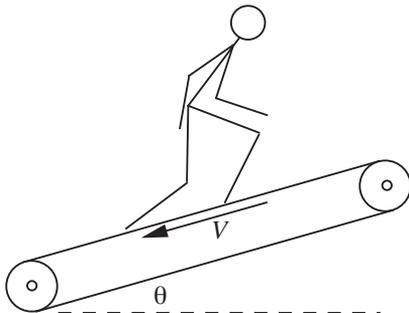


Fig. P1.28 Person on a treadmill.

28. Treadmill stress test— M . What power P is needed to resist a force F at a steady velocity V ? In a treadmill stress test (Fig. P1.28), you have to keep walking to keep up with a moving belt whose velocity V and angle of inclination θ are steadily increased. Initially, the belt is moving at 1.7 mph and has a grade (defined as $\tan \theta$) of 10%. The test is concluded after 13.3 min, at which stage the belt is moving at 5.0 mph and has a grade of 18%. If your mass is 163 lb_m: (a) how many HP are you exerting at the start of the test, (b) how many HP are you exerting at the end of the test, and (c) how many joules have you expended overall?

29. Bubble rising in compressible liquid— D . A liquid of volume V and isothermal compressibility β has its pressure increased by an amount Δp . Explain why the corresponding increase ΔV in volume is given approximately by:

$$\Delta V = -\beta V \Delta p.$$

Repeat Problem 1.11, now allowing the oil—whose density and volume are initially ρ_0 and V_0 —to have a finite compressibility β . Prove that the ratio of the final bubble volume v_1 to its initial volume v_0 is:

$$\frac{v_1}{v_0} = 1 + \frac{\rho_0 g H}{p_0}.$$

If needed, assume that: (a) the bubble volume is much smaller than the oil volume, and (b) $\beta p_0 V_0 \gg v_1$. If $\rho_0 = 800 \text{ kg/m}^3$, $\beta = 5.5 \times 10^{-10} \text{ m}^2/\text{N}$, $H = 1 \text{ m}$, $p_0 = 10^5 \text{ N/m}^2$ (initial absolute pressure at the top of the cylinder), $v_0 = 10^{-8} \text{ m}^3$, and $V_0 = 0.1 \text{ m}^3$, evaluate v_1/v_0 and check that assumption (b) above is reasonable.

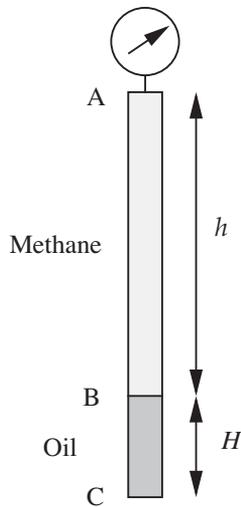


Fig. P1.30 Well containing oil and methane.

30. *Pressures in oil and gas well—M.* Fig. P1.30 shows a well that is 12,000 ft deep. The bottom $H = 2,000$ -ft portion is filled with an incompressible oil of specific gravity $s = 0.75$, above which there is an $h = 10,000$ -ft layer of methane (CH_4 ; $C = 12$, $H = 1$) at 100°F , which behaves as an ideal isothermal gas whose density is *not* constant. The gas and oil are static. The density of water is $62.3 \text{ lb}_m/\text{ft}^3$.

- If the pressure gauge at the top of the well registers $p_A = 1,000$ psig, compute the *absolute* pressure p_B (psia) at the oil/methane interface. Work in terms of symbols before substituting numbers.
- Also compute $(p_C - p_B)$, the additional pressure (psi) in going from the interface B to the bottom of the well C.

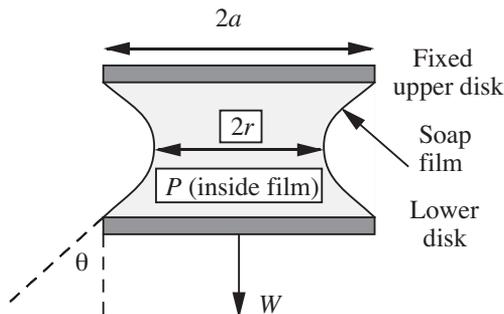


Fig. P1.31 Soap film between two disks.

31. *Soap film between disks—E (C).* A circular disk of weight W and radius a is hung from a similar disk by a soap film with surface tension σ , as shown in Fig. P1.31. The gauge pressure inside the film is P .

First, derive an expression for the angle θ in terms of a , P , W , and σ . Then obtain an equation that relates the radius of the neck r to a , P , W , and σ . Assume that: (a) the excess pressure inside a soap film with radii of curvature r_1 and r_2 is $2\sigma(1/r_1 + 1/r_2)$, and (b) the cross section of the film forms a circular arc.

32. Newspaper statements about the erg—E. In the *New York Times* for January 18, 1994, the following statement appeared: “An erg is the metric unit scientists use to measure energy. One erg is the amount of energy it takes to move a mass of one gram one centimeter in one second.” (This statement related to the earthquake of the previous day, measuring 6.6 on the Richter scale, in the Northridge area of the San Fernando Valley, 20 miles north of downtown Los Angeles.)

Also in the same newspaper, there was a letter of rebuttal on January 30 that stated in part: “This is not correct. The energy required to move a mass through a distance does not depend on how long it takes to accomplish the movement. Thus the definition should not include a unit of time.”

A later letter from another reader, on February 10, made appropriate comments about the original article and the first letter. What do you think was said in the second letter?

33. Centroid of triangle—E. A triangular plate held vertically in a liquid has one edge (of length B) coincident with the surface of the liquid; the altitude of the plate is H . Derive an expression for the depth of the centroid. What is the horizontal force exerted by the liquid, whose density is ρ , on one side of the plate?

34. Blake-Kozeny equation—E. The Blake-Kozeny equation for the pressure drop ($p_1 - p_2$) in laminar flow of a fluid of viscosity μ through a packed bed of length L , particle diameter D_p and void fraction ε is (Section 4.4):

$$\frac{p_1 - p_2}{L} = 150 \left(\frac{\mu u_0}{D_p^2} \right) \left[\frac{(1 - \varepsilon)^2}{\varepsilon^3} \right].$$

- (a) Giving your reasons, suggest appropriate units for ε .
 (b) If $p_1 - p_2 = 75 \text{ lb}_f/\text{in}^2$, $D_p = 0.1 \text{ in.}$, $L = 6.0 \text{ ft}$, $\mu = 0.22 \text{ P}$, and $u_0 = 0.1 \text{ ft/s}$, compute the value of ε .

35. Shear stresses for air and water—E. Consider the situation in Fig. 1.8, with $h = 0.1 \text{ cm}$ and $V = 1.0 \text{ cm/s}$. The pressure is atmospheric throughout.

- (a) If the fluid is air at 20°C , evaluate the shear stress τ_a (dynes/cm^2). Does τ vary across the gap? Explain.
 (b) Evaluate τ_w if the fluid is water at 20°C . What is the ratio τ_w/τ_a ?
 (c) If the temperature is raised to 80°C , does τ_a increase or decrease? What about τ_w ?

36. *True/false.* Check *true* or *false*, as appropriate:¹⁴

- | | | | |
|-----|---|----------------------------|----------------------------|
| (a) | When a fluid is subjected to a steady shear stress, it will reach a state of equilibrium in which no further motion occurs. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (b) | Pressure and shear stress are two examples of a force per unit area. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (c) | In fluid mechanics, the basic conservation laws are those of volume, energy, and momentum. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (d) | Absolute pressures and temperatures must be employed when using the ideal gas law. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (e) | The density of an ideal gas depends only on its absolute temperature and its molecular weight. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (f) | Closely, the density of water is $1,000 \text{ kg/m}^3$, and the gravitational acceleration is 9.81 m/s^2 . | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (g) | To convert pressure from gauge to absolute, add approximately 1.01 Pa . | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (h) | To convert from psia to psig, add 14.7 , approximately. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (i) | The absolute atmospheric pressure in the classroom is roughly one bar. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (j) | If ρ is density in g/cm^3 and μ is viscosity in g/cm s , then the kinematic viscosity $\nu = \mu/\rho$ is in stokes. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (k) | For a given liquid, surface tension and surface energy per unit area have identical numerical values <i>and</i> identical units. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (l) | A force is equivalent to a rate of transfer of momentum. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (m) | Work is equivalent to a rate of dissipation of power per unit time. | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (n) | It is possible to have gauge pressures that are as low as -20.0 psig . | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (o) | The density of air in the classroom is roughly 0.08 kg/m^3 . | T <input type="checkbox"/> | F <input type="checkbox"/> |
| (p) | Pressure in a static fluid varies in the vertically upward direction z according to $dp/dz = -\rho g_c$. | T <input type="checkbox"/> | F <input type="checkbox"/> |

¹⁴ Solutions to all the true/false assertions are given in Appendix B.

- (q) At any point, the rate of change of pressure with elevation is $dp/dz = -\rho g$, for both incompressible *and* compressible fluids. T F
- (r) A vertical pipe full of water, 34 ft high and open at the top, will generate a pressure of about one atmosphere (gauge) at its base. T F
- (s) The horizontal force on one side of a vertical circular disk of radius R immersed in a liquid of density ρ , with its center a distance R below the free surface, is $\pi R^3 \rho g$. T F
- (t) For a vertical rectangle or dam of width W and depth D , with its top edge submerged in a liquid of density ρ , as in Fig. 1.15, the total horizontal thrust of the liquid can also be expressed as $\int_0^D \rho g h W dh$, where h is the coordinate measured *downward* from the free surface. T F
- (u) The horizontal pressure force on a rectangular dam with its top edge in the free surface is F_x . If the dam were made twice as deep, but still with the same width, the total force would be $2F_x$. T F
- (v) A solid object completely immersed in oil will experience the same upward buoyant force as when it is immersed in water. T F
- (w) Archimedes' law will not be true if the object immersed is hollow (such as an empty box with a tight lid, for example). T F
- (x) The rate of pressure change due to centrifugal action is given by $\partial p/\partial r = \rho r^2 \omega$, in which ω is the angular velocity of rotation. T F
- (y) To convert radians per second into rpm, divide by 120π . T F
- (z) The shape of the free surface of a liquid in a rotating container is a hyperbola. T F
- (A) The hydrostatic force exerted on one face of a square plate of side L that is held vertically in a liquid with one edge in the free surface is F . If the plate is lowered vertically by a distance L , the force on one face will be $3F$. T F

GENERAL INDEX

A

Absolute pressure, 8
Aggregatively fluidized beds,
571, 577
fluid flow in, 580
particle flow in, 475
pressure distribution in,
578
Analogies, between momen-
tum and heat transfer,
509
Angular momentum, 81
Angular velocity, 4, 39, 258,
358
Annular die, flow through,
325
Annular flow, 554, 563
ANSYS Fluent, 688, 699
A.P.L., degrees, 11
Archimedes, biographical
sketch, 36
Archimedes' law, 37
Archimedes number, 200
Axially symmetric irrotat-
ional flow, 382

B

Balances, energy, 9, 55, 61
mass, 9, 55, 57
momentum, 9, 55, 78
Basis or shape function, in
finite-element methods,
698
Bearing, journal, 449
thrust, 449
flow in, using COMSOL,
454
Bernoulli, Daniel, biographi-
cal sketch, 68
Bernoulli's equation, 67, 358,
388, 544
compressible flow, 161
generalized, 64
Bingham plastic fluids, 605,
611
in pipe flow 611
Blake-Kozeny equation, 207
Blasius equation, 129, 432,
500, 502, 522
Blasius solution for boun-
dary layer flow, 429
Blow molding, 314
Blunt-nosed object, flow
past, 361, 387
Bob-and-cup viscometer, 641
Body force, 56, 79
Body-force, electric, 660
Boltzmann distribution, 663
Boltzmann's constant, 131
Boundary, 9, 55
Boundary conditions, 293
Boundary layers, 418
application to turbulent
jets, 524
dimensional analysis of,
434
laminar, 419
simplification of equations
of motion for, 426
solution using COMSOL,
439
turbulent, 432
Bourdon-tube pressure
gauge, 89

Brownian motion, 129
Bubble caps, dynamics of, in
distillation columns, 216
Bubble flow in vertical pipes,
554, 556
Bubbles, in fluidized beds,
571
formation at an orifice, 574
rise velocity of, 573, 583
Bubbles, rise velocity of,
542, 556
Bubbles, terminal velocity,
543
Buckingham Pi theorem, 227
Buffer region, 497
Buoyancy, 36
Burke-Plummer equation,
207

C

Cake, in a filter, 210
Calendering, 314, 405, 457
pressure distribution in,
462
Capillary pressure, in porous
medium, 397
Capillary tube, for surface
tension, 19
Capillary viscometer, 636
Caprock, 399
Carreau model, 607, 610,
Cascade process in turbu-
lence, 481
Centrifugal filter, 214
Centrifugal pump, 164, 189
Characteristic time, 607
Charge number, 658

- “Choking” of the throat, 163
 Churchill, S.W., Reynolds stress correlation, 503
 interpolation between two asymptotic limits, 505
 Coating a moving substrate, 468
 Coating or spreading, 314
 Coaxial cylinder rheometer, 641
 Coefficient of contraction, 71
 Coefficient of discharge, 73
 Coefficient of thermal expansion, 12
 Coions, 663
 Colebrook and White equation, 136, 501
 Commercial pipe, sizes, 138
 Complex piping systems, 163
 Compressibility factor, 12
 Compressibility, isothermal, 12
 Compressible flow of gases, in a nozzle, 159
 in a pipeline, 156
 with COMSOL, 760
 Compressive stress, 6
 Computational fluid dynamics (CFD), 480, 688
 applications in chemical engineering, 689
 COMSOL Multiphysics
 Index appears after this General Index
 Cone-and-plate viscometer, 331, 640
 Connate water, 396
 Conservation laws, 9, 55
 Constitutive equations,
 Bingham model, 605, 611
 Carreau model, 610
 generalized Newtonian fluids, 609
 general viscoelastic fluids, 628
 Maxwell model, 628
 Newtonian fluids, 296, 606
 power-law model, 610
 White-Metzner model, 632
 Contact force, 56, 79
 Continuity equation, 59, 72, 267, 268
 time-averaged, 484
 Control surface, 55
 for momentum transfer, 81
 Convection of momentum, 81
 Convective derivative, 266, 632
 Converging/diverging nozzle, 159
 Conversion factors, table of, *inside front cover*, 25
 Coriolis mass-flow meter, 95
 Couette flow, 294, 313, 317, 331
 in lubrication, 453
 Counterions, 663
 Critical pressure for compressible gas flow, 158, 163
 Cross product, 251
 Curl of a vector, 259
 expressions for, 266
 Curvature, 465, 765
 Curved surface, change in pressure across, 18, 465
 Cyclone separation, 219
 Cylinder, flow past, computed by Fluent, 195, 713
 drag coefficient, 716
 Cylindrical coordinates, 263
 mass balance in, 268
 momentum balances in, 325
 solution of problems in, 325
- D**
- Darcy’s law, 207, 392, 396, 726
 Dam, force on, 32
 Deborah number, 607
 Debye-Huckel limit, 664
 Debye length, 654
 Deformation of a fluid element, 275, 360
 Del (nabla) operator, in rectangular coordinates, 265
 Density, 10
 °A.P.I., 11
 Derivative, definition of, 27, 257
 Derivatives, 761
 Derived quantities, 225
 Diameter, hydraulic mean, 151
 Die swell, 627
 Dies, flow through, 314, 325
 non-Newtonian, 617
 Differential equations, solution of, separation of variables, 763
 spreadsheets, 473, 764
 Differential mass balance, 267
 Differential momentum balance, 271
 Diffuser, in a nozzle, 159
 Diffusion coefficient, 15
 Diffusion in microchannels, 656
 Diffusion of momentum, 307
 Dilatant fluids, 604, 610, 614
 Dimensional analysis, 224
 Dimensional analysis of boundary layer flow, 434
 Dimensionless groups, for
 drag force, 196
 filtration, 224
 flow through packed beds, 206
 laminar sublayer, 230
 pipe flow, 132, 134
 pumps, 192
 Dimensionless numbers, table of, 228
 Dimensionless shear stress, 132, 498
 Dimensions, 226
 mass, length, and time, 10
 Directional derivative, 252
 Discharge coefficient, 73
 Discretization, in numerical methods, 691

- Dissipation, *see* frictional dissipation
- Dissipation, turbulent, 506
transport equation for, 507
- Distillation column, dynamics of bubble caps, 216
- Dittus-Boelter equation, 522
- Divergence of a vector, 254
expressions for, 265
- Dot product, 250
- Double-dot product, 608
- Doublet, 388
- Drag coefficient, 196
- Drag coefficient on a flat plate, 419, 423, 432, 433, 436
- Drag force, 194
- Drawing or spinning, 313
- Droplet, excess pressure inside, 18
- Ducts, flow in noncircular, 150
- Dyadic product, 632, 770
- Dynamical similarity, 229
- E**
- Eddies, 131, 481, 487
formation of, 482
- Eddy diffusivity, 490
- Eddy kinematic viscosity, 132, 489, 490, 491
correlation for, 493
determination of, 492
in turbulent jets, 529
- Eddy thermal diffusivity, 490
- Eddy transport, 488
- Elastic modulus, 634
- Elastic recoil, 630
- Electrical double layer, 661, 662, 663
- Electric charge, 658
flux of, 659
- Electric field, 658
- Electric potential, 660, 663, 654
- Electrokinetic flow, 653, 681
- Electrokinetic forces, 681
- Electroosmosis, 661, 665
measurement of, 676
- Electroosmosis in a micro-channel (COMSOL), 667, 673
- Electroosmotic flow around a particle, 667
- Electroosmotic mobility, 661
- Electrophoresis, 659, 681
- Electrophoretic mobility, 659
- Electrostatic precipitator, 202
- Electroviscosity, 678
- Energy balance, 55, 62, 609,
pipe flow, 126, 128
- Energy, conservation of, 9, 55
- English units, 22
- Entrance region between flat plates, 446
- Eötvös number, in slug flow, 560
- Equations of motion, 268, 281, 294, 325, 330
solutions of, 293
- Equipment, visual encyclopedia of, 185
- Equipotentials, 369
in microfluidics, 672, 675
- Equivalent length of fittings, 154
- Ergun equation, 206
- Euler equation, 358, 401
- Euler's method, 763
- Eulerian viewpoint, 267
- Excel spreadsheets, 143, 145, 146, 150, 167, 461
- Extrusion of polymer, 313
- F**
- Falling-sphere viscometer, 202
- Fanning friction factor, 132, 133, 135, 136, 137
- Faraday's constant, 663
- FEMLAB—*see* under its new name, COMSOL
- Multiphysics
- Fick's law, 658
- Film flow, 463
- Film, in lubrication, 449
- Filtrate, 210
- Filtration, 210
centrifugal, 213
plate-and-frame, 210
rotary-vacuum, 212
- Finite-difference methods, 691
- Finite-element methods, 697
- Finite-volume methods, 693
- Fittings, equivalent length, 154
- Five-spot pattern, 395
- Flooding, 566
- Flow energy, 62
- Flow, around sphere, 194
in noncircular ducts, 150
in open channels, 151
past a flat plate, 419, 432
through a porous medium, 207
through packed beds, 204
- Fluent, examples involving,
flow in pipe entrance, 704
flow past a cylinder, 713
sudden expansion, 707
two-dimensional mixing, 709
- Fluent, CFD software, 699
geometry panel, 701
graphical user interface, 700
mesh and solve panels, 702
operation toolpad buttons, 700
physics, boundary condition, and materials panels, 701
reports and postprocessing panels, 703
- Flow rates, 9
- Flow rate, measurement of, 94
by Coriolis meter, 95
by orifice plate, 71
by rotameter, 89
- Flow regimes in two-phase flow,

horizontal pipes, 552
 vertical pipes, 554
 Fluent, Inc., 699
 Fluid, definition of, 9
 Fluid mechanics, laws of, 9
 Fluidization, 215, 570
 aggregative, 571, 577
 particulate, 570
 Fluidized bed, 570
 reaction in, 583
 Flux, 8, 254
 Force, 22
 as a rate of momentum
 transfer, 79
 on arbitrary surfaces, 33
 on dam, 32
 power for displacement of,
 64
 units of, 21
 Forced vortex, 39, 359
 Form drag, 194
 Fourier's law, 256, 260
 Fox, T.R.C., xvii,
 463 *footnote*
 Free surface, 28, 33
 of rotating fluid, 39
 Free vortex, 40, 220, 359
 Friction factor, 124
 analogy with the Stanton
 number, 521
 as a dimensionless group,
 132, 210
 in terms of Re , 135, 498
 Friction-factor plot, 135
 Friction velocity, 496
 Frictional dissipation,
 63, 609
 nongircular ducts, 151
 open channels, 152
 packed beds, 207
 pipe flow, 126, 134
 Froude number, in slug flow,
 560
 Fundamental dimensions,
 225

G

Galerkin's method, 698
 Gas constant, values of, 12
 Gas law, 11
 Gas-lift pump, 561
 Gas, pressure variations
 in, 31
 Gas, underground storage
 of, 399
 Gases, 5
 flow of compressible,
 156, 159
 viscosity of, 131
 Gauge pressure, 8
 Gate valve, 154
 g_c , conversion factor, 22
 General linear viscoelastic
 fluids, 628, 631
 Generalized Maxwell model,
 631
 Geometrical shapes, 761
 Geometrical similarity, 229
 Globe valve, 154
 Gradient of a scalar, 252
 expressions for, 265

H

Hagen-Poiseuille law, 125
 Harlow, Francis, bio-
 graphical sketch, 753
 Harrison, D., bubble forma-
 tion in fluidized beds,
 576
 Head, of fluid, 68
 Head/discharge curve for
 centrifugal pump, 192
 Heat transfer, analogy with
 momentum transfer,
 509
 Hookean solid, 629
 Hoop stress in pipe wall, 139
 Hydraulic mean diameter,
 151
 Hydraulically smooth pipe,
 136
 Hydrostatics, 26
 multiple fluids, 30

I

Impeller, of pump, 91, 190
 Incipient fluidization,
 215, 570
 Infinite-shear viscosity, 610
 Injection molding, 313
 Integrals, 761
 Intensity of turbulence, 484
 Internal energy, 61
 Invariants of the strain-rate
 tensor, 608
 Inviscid fluid, motion of, 357
 Irrigation ditch, 152
 Irrotational flow, 260, 359
 axially symmetric, 382
 in cylindrical coordinates,
 366
 in rectangular coordinates,
 364
 line source, 373
 past a blunt-nosed object,
 361, 387
 past a cylinder, 370
 past a sphere, 390
 point source, 386
 stagnation flow, 372, 387
 uniform flow in, 369, 384
 Irrotationality condition, for
 axially symmetric flow,
 383
 for cylindrical flow, 367
 for rectangular flow, 364
 Isentropic expansion, 160
 Isothermal compressibility,
 12
 Isothermal flow of gas in
 pipe, 156

J

Jet mixing, COMSOL
 computation of, 514
 Fluent computation of,
 709
 Journal bearing, 449

K

Karamanev, D.G., method for terminal velocities, 200
 Kármán vortex street, 482, 714
 k - ε method for turbulent flows, 506
 with COMSOL, 508, 514
 with Fluent, 707
 Kinematic viscosity, 15, 523
 Kinetic energy, 61, 67
 for pipe flow, 127
 Kinetic energy, turbulent, 506
 transport equation for, 507
 Kolmogorov limit, 481, 483
 Kronecker delta, 251

L

Lagrangian viewpoint, 266
 Lake flow, with COMSOL, 376
 Lamb, Horace, feelings about turbulence, 480
 Laminar flow, friction in, frictional dissipation, 126
 friction factor for, 134
 in a pipe, 122, 123
 Laminar flow, unstable, 482, 717
 Laminar sublayer, 155, 497
 dimensional analysis of, 229
 thickness of, 155, 500
 Laminar velocity profile, 124, 155
 Laplace, Pierre Simon, Marquis de, biographical sketch, 365
 Laplace's equation, 262
 in irrotational flow, 365, 367, 383
 for axially symmetric flow, 383
 with COMSOL, 726, 758
 Laplacian operator, 262

expressions for, 266
 Laws of fluid mechanics, 9
 Leibnitz's rule, 631 *footnote*, 766
 Leung, L.S., bubble formation in fluidized beds, 576
 Linear viscoelasticity, 628
 Line source, 373
 Liquids, 5
 Lockhart/Martinelli correlation, 550, 563
 Logarithmic velocity profile, 494, 497
 Lorentz force, 660
 Loss angle, 634
 Loss modulus, 634
 Lubrication approximation, 450
 Lubrication flow, with COMSOL, 454

M

Macintosh computer for COMSOL, 510
 Magnetic settling, 679
 Manometer, 93
 Mass, 21
 conservation of, 9, 55
 Mass balance, 55, 57
 steady state, 57
 Mass flow rate, 9
 Mass velocity, 157
 Material types, 602
 Maxwell, James Clerk, biographical sketch, 629
 Maxwell model, 628
 Memory function, 631
 Microfluidics, 653
 chips for, 654
 Microscale fluid mechanics, 654
 Mist flow, 482
 Mixing length, correlation for, 492
 determination of, 491
 Mixing-length theory, 488
 for turbulent jets, 526

Moment of inertia, 90
 Momentum, 78
 angular, 90
 balance, 55, 78
 conservation of, 55, 79
 diffusion of, 307
 Momentum balance, for bubble formation at an orifice, 575
 in film flow, 409
 shell, 301
 time-averaged, 485
 Momentum transfer, by convection, 9, 81
 by force, 79
 in laminar flow, 129
 in turbulent flow, 131
 Momentum transfer, analogy with heat transfer, 509
 Moody friction factor, 132

N

Natural gas, underground storage of, 399
 Navier, Claude-Louis-Marie-Henri, biographical sketch, 281
 Navier-Stokes equations, 278, 281
 in microfluidics, 660
 with COMSOL, 756
 Needle valve, 154
 Newton, Sir Isaac, biographical sketch, 131
 law of viscosity, 124, 130
 second law of motion, 21, 27
 Newtonian fluid, 4, 14, 124, 130, 275, 276, 279, 602, 609
 Nicklin, D.J., correlation for two-phase slug flow, 559
 Nikuradse, pipe friction experiments, 136
 Nonlinear simultaneous equations, 149, 166
 Non-Newtonian flow in a die, with COMSOL, 617

viscosity profiles, 624
 Non-Newtonian flows using
 COMSOL, 758
 Non-Newtonian fluid, 4, 603
 Normal stresses, 271, 276,
 viscoelastic, 613
 Normal-stress difference, 613
 No-slip boundary condition,
 273
 Nozzle, gas flow in, 159
 Numerical methods for
 solving fluid mechanics
 problems, 690

O

Oldroyd derivative, 633
 One-seventh power law,
 500, 502
 Open-channel flow, 151
 Order-of-magnitude
 analysis,
 for boundary-layer flow,
 427
 for turbulent jets, 524
 Ordinary differential equa-
 tions, solution of, 763
 Orifice, flow through,
 compressible, 159
 incompressible, 70
 Orifice-plate “meter,” 71
 Orifice plate, COMSOL
 solution, 88, 508
 pressure recovery, 514
 Oscillatory shear, with
 COMSOL, 310
 Ostwald–de Waele model,
 610

P

Packed beds, 204
 Packed-bed reactor, pressure
 drop in, 208
 Packed column, flooding of,
 567
 Paint films, leveling of, 470
 Parabolic velocity profile,

 124, 155
 Parallel-plate rheometer, 641
 Particle motion in micro-
 fluidic channels, 678
 Particles, settling of, 199,
 201, 222
 Particulate phase (“emul-
 sion”), in fluidization,
 571
 Péclet number, 657
 Permeability, 208, 391,
 395, 400
 Permittivity, 660, 668
 Physical properties, 10
 Piezoelectric and piezoresis-
 tive effects in pressure
 transducer, 93
 Piezometer, 93
 Piezometric tube, 69, 93
 Pipe fittings, pressure drop,
 154
 Pipe flow, Bingham plastic,
 615
 power-law fluid, 611
 Pipe flow, pressure drop in,
 123, 133, 139
 Pipe roughness, 136
 Pipeline, for gas, 156
 Pipes, flow through, 120
 Piping systems, 149, 163
 Pitot tube, 74
 Pitot-static tube, 74
 Plate-and-frame filter, 210
 Point source, 385
 Poiseuille flow, 294, 313, 317
 in lubrication, 453
 Poisson’s equation, in
 lubrication, 451
 Poisson’s equation,
 solution of,
 by COMSOL, 376, 758
 by finite-element methods,
 691
 by finite-difference
 methods, 691
 microfluidics, 660
 Polymath, 150, 164
 Polymer processing, 313, 457
 Pores, flow through, 205
 Porosity, 395, 400

Porous medium, flow
 through, 207, 577
 single-phase, 367, 392, 394
 two-phase, 394
 with COMSOL, 726, 759
 Potential, for porous-
 medium flow, 396
 Potential energy, 61
 Potential flow, 261, 364
 Power,
 for flowing stream, 64
 for force displacement, 64
 for pump, 64
 for rotating shaft, 64
 Power-law fluids, 610, 611
 Power-law velocity profile,
 502, 614
 Prandtl hypothesis, 493
 Prandtl, Ludwig, bio-
 graphical sketch, 438
 Prandtl mixing length, 490
 Prandtl-Taylor analogy, 521
 Pressure, 6
 absolute, 8
 gauge, 8
 Pressure as a function of
 height, 26
 Pressure change caused by
 rotation, 39
 Pressure distribution, in
 calendering, 461
 in fluidized beds, 578
 Pressure drop, across pipe
 fittings, 154
 in pipe flow, 123, 133, 139
 Pressure drop in two-phase
 flow
 horizontal pipes, 547
 vertical pipes, 560, 563
 Pressure forces on sub-
 merged objects, 36
 Pressure head, 68
 Pressure measurement, 92
 Pressure transducer, 93
 Primary recovery of oil, 394
 Projected area, 196
 Pseudoplastic fluids, 604,
 610, 614
 Pump impeller, 91, 190
 Pumps, centrifugal, 164, 189
 positive displacement,
 188, 189
 Pumps in series and
 parallel, 193

R

- Rabinowitsch equation, 637
 Radius of curvature, 765
 Rate laws, 57
 Rate-of-deformation tensor, 279
 Rate-of-strain tensor, 279, 607
 invariants of, 608
 Reaction in fluidized bed, 583
 Reciprocating pumps, 188
 Recirculation in sudden expansion,
 in jet mixing, with Fluent, 711
 using Fluent, 708
 Rectangular coordinates, 249
 mass balance in, 268
 momentum balances in, 272, 281
 problems in, 294
 Rectangular duct, flow through, 150, 294
 Reference quantities, 434
 Relaxation modulus, 631
 Relaxation time, 629
 Residual oil, 396
 Reynolds analogy, 520
 Reynolds experiment, 121
 Reynolds number, 73, 122, 228
 for boundary-layer flow, 419, 432
 for drag force, 196
 in microfluidics, 655
 in pipe flow, 134, 135, 137, 149
 Reynolds, Osborne, biographical sketch, 121
 Reynolds stresses, 486
 correlation for, 503
 Rheometers, 638
 Rheopectic fluids, 605
 Richardson-Zaki correlation, 222, 571
 Rod-climbing effect, 627
 Rotameter, 89
 Rotary pumps, 189
 Rotary-vacuum filter, 212
 Rotating fluid, 39
 Rotational flow, 359
 Rotational rheometers, 638
 Roughness, pipe, 136
 Rough pipe, flow in, 136, 501
- S
- Saturation, in porous medium, 395
 Scalars, 249
 Schedule number for pipe, 137
 Screw extruder, 314
 with COMSOL, 319
 Secondary recovery of oil, 394
 Sedimentation, 222
 Separation of variables, 763
 Settling of particles, 199, 201, 222
 Shacham equation, for turbulent friction factor, 137, 150
 Shear stress, 3, 6, 14, 271, 274
 dimensionless groups for pipe flow, 225
 distribution, 124, 300, 616
 in pipe flow, 80, 123
 models for, 129
 Shear-thickening fluids, 604, 615
 Shear-thinning fluids, 604, 610, 615
 Shell momentum balance, 301
 Shock, in gas flow, 159, 163
 SI units, 21, 23
 Sign convention for stresses, 271
 Similar velocity profiles, 421
 Simple shear, 603, 608, 628
 Simpson's rule, 763
 Simultaneous nonlinear equations, 149, 166
 Slug flow in vertical pipes, 554, 558
 Slurry, 210
 Smooth pipe, flow in, 497
 Solenoidal flow, 256
 Solids, 602, 629
 Solution procedure, for viscous-flow problems, 293
 Sound, speed of, 159, 163
 Source in a uniform stream, 386
 Specific gravity, 13
 Sphere, drag force on, 194, 438
 Sphere, flow past, 194, 390, 438
 Spherical coordinates, 263
 mass balance in, 268
 momentum balances in, 283
 solution of problems in, 330
 Spherical-cap bubbles, 544
 Sphericity, particle, 197, 198
 Spinning of fibers, 328
 Spray drier, 201
 Spreadsheets, 143, 145, 146, 150, 167, 461, 764
 Spreadsheet solution of differential equations, 764
 Spring/dashpot model, 630
 Stagnation flow, 372, 387
 Stagnation point, 372, 387, 544
 Static head, 68
 Steady in the mean, 87, 425
 Steady-state energy balance, 62
 Steady-state mass balance, 59
 Steady-state problems, 57
 Stokes, Sir George Gabriel, biographical sketch, 198
 Stokes' law, 198
 Storage modulus, 634
 Strain rate, 603, 606, 609
 for non-Newtonian flow in a die, 626
 Strain-rate tensor, 279, 607

- Stream function, 365,
367, 382
for boundary layers, 430
for turbulent jets, 527, 529
physical interpretation of,
367, 382
- Streaming potential, 676
- Streamlines, 57, 358, 369
in microfluidics, 672, 675
- Stream tube, 62
- Strength, of a doublet, 388
of a line source, 373
of a point source, 385
- Stress and strain, for visco-
elastic fluid, 635
- Stress, compressive, 6
tensile, 5
- Stress, sign convention for,
271
- Stress relaxation, 630
- Stress tensor, 274, 279, 606
- Strong conservation form,
690, 693
- Strouhal number, 716
- Substantial derivative, 266
- Sudden expansion, after
orifice plate, 86
in a pipe, 88
solved by Fluent, 707
- Superficial velocity, 205
- Supersonic velocity, 159, 162
- Surface energy, 17
- Surface roughnesses, 136
- Surface tension, 16
in thin-film flow, 463
methods for measuring, 19
- Surface waves, 400
- Surroundings, 9, 55
- System, 9, 55
- T**
- Tangential stresses, 6,
272, 274
- Tank draining, 70
evacuation, 58
filling, 76
- Taylor dispersion, 656
- Taylor, Geoffrey Ingram,
biographical sketch, 545
- Taylor's expansion, 31, 763
- Tensile stress, 5
- Tensors, 274, 279, 606, 770
"divergence" of, 771
"Laplacian" of, 771
- Terminal velocities of
spheres, 199
Karamanev method, 200
- Tertiary recovery of oil, 394
- Thermal diffusivity, 523
- Thermal expansion,
coefficient of, 12
- Thin films, 463
- Thixotropic fluids, 605
- Thrust bearing, 449
- Time-averaged continuity
equation, 484
momentum balance, 485
- Time-averaging, 483
- Torque, 91, 191
power for rotation of, 64
- Total head, 69
- Transducer, for measuring
pressure, 93
- Transient problems, 57
- Transient viscous diffusion
of momentum
(COMSOL), 307
- Transition flow, 121
- Turbulence, 122, 124, 480
computation by the $k-\varepsilon$
method, 506
intensity of, 484
 $k-\varepsilon$ method for, 506
mixing-length theory, 488
momentum transport in,
131, 487, 520
orifice-plate flow, 508
solved by COMSOL, 757
solved by Fluent,
707, 709
velocity profiles, 155,
494, 497, 499
- Turbulent boundary layers,
432
- Turbulent core, 155, 229,
497, 499
- Turbulent energy, 481, 506
dissipation rate ε , 506
fluctuations, 482, 483, 486
- Turbulent jets, 524
axisymmetric, 530
plane, 525
- Turbulent properties com-
puted by COMSOL,
dissipation, 512, 519
kinematic viscosity, 512,
519
kinetic energy, 512, 517
- Turbulent transport,
summary of, 490
- Two-phase flow in porous
media, 394
- Two-phase flow in pipes,
horizontal pipes, 547
vertical pipes, 554
- U**
- Underground flow of water,
367, 392
- Underground storage of
natural gas, 399
- Unit vectors, 250
- Universal velocity profile,
495
- Unstable laminar flow,
482, 717
- Unsteady-state problems, 57
- Usagi, R., interpolation
between two asymptotic
limits, 505
- V**
- Valve, for pipeline, 154
- Vanes, of centrifugal pump,
190
- Variable-viscosity momen-
tum balance, 284
- Vector components, 250
- Vector differentiation, 251
- Vectors, 249
addition and subtraction,
250
dyadic product, 770
multiplication, 250

- Velocity, 8
 - Velocity head, 68
 - Velocity, no-slip boundary condition, 293
 - Velocity of sound, 159, 162
 - Velocity potential, 260, 364, 367, 383
 - Velocity profiles, boundary-layer flow, 421, 422, 430, 432
 - calendering, 460, 470
 - concentric cylinders, 4
 - development in entrance region, 446
 - lubrication, 450
 - parallel plates, 14
 - pipe flow, 124, 155, 494, 497
 - turbulent flow, 494, 497, 499
 - turbulent jets, 528, 531
 - viscous flow, 124, 297, 305, 317, 327, 334
 - Vena contracta*, 71
 - Viscoelastic fluids, 613, 631
 - constitutive equations, 613
 - phase relations, 635, 636
 - Viscometers, 638
 - Viscosity, 3, 13
 - eddy kinematic, 131, 490
 - kinematic, 15, 523
 - of gases, 131
 - Viscous dissipation function, 609
 - Viscous drag, 194
 - Viscous-flow problems, 292
 - Viscous modulus, 634
 - Visual encyclopedia of chemical engineering equipment, 185
 - Void fraction, 205
 - in two-phase flow, 547, 555, 560
 - Volumetric flow rate, 9
 - Volute chamber, 190
 - Von Kármán hypothesis, 494
 - Vortex, forced, 39, 359
 - free, 40, 359
 - Vortex formation during jet mixing, 518
 - Vortex lines, 358
 - Vortex shedding past a cylinder, 715
 - Vorticity, 260, 358, 361
 - for non-Newtonian flow in a die, 625
 - source term for, 376
- W**
- Waterflooding, 395
 - Wave motion in deep water, 400
 - paths followed by particles, 403
 - Weight, 21
 - Weir, in distillation column, 217
 - Weissenberg, Prof. Karl, biographical sketch, 639
 - Weissenberg effect, 627
 - Weissenberg, lectures of, 603
 - Weissenberg number, 639
 - Weissenberg rheogoniometer, 331, 640
 - Wetted perimeter, 150
 - Weymouth equation, 157
 - White-Metzner model, 632
 - Work, 56, 61
- Y**
- Yield stress, 605, 611
- Z**
- Zajic, S.C., Reynolds stress correlation, 503
 - Zero-shear boundary condition, 294
 - Zero-shear viscosity, 610
 - Zeta potential, 661, 663, 665

COMSOL MULTIPHYSICS INDEX

GENERAL INDEX

Axes and grid settings, 739
Bézier polygons, 739, 755
Boolean operations, 732
Boundary conditions, 742
Boundary layers in turbulent flow, 745
Boundary settings, 734, 742
Brinkman equation, 760
Complex shapes, 738
Composite object, 732, 739
COMSOL, Inc., 720, 722
Constants, 741
Display of results, 725, 736
Documentation, 722
Draw mode, 754
Draw toolbar, 754
Drawing tools, 754
Equations solvable by, 756
Expressions, 741
Geometry, 731, 738
Graphical user interface, 729
Graphics window, 730
How to run, 725
Interior boundaries, 739
 k - ε method, 745
Materials definition, 732
Menu for physics, 728
Mesh, 734, 746
Mesh refinement, 734
Model Builder, 729
Model Wizard, 726
Multiphysics, 667, 673
Parameters, 731
Physics selection, 728

Porous-medium flow, 726
Problems solvable by, 756
Ranges, 741
Settings window, 730
Solving a problem, 723
Space dimensions, 727
Special features, 749
Steps for solving problems, 723
Streamline plotting, 747
Surface plot, 735
Turbulent flow, 744
Units, 741
Variables, 741, 743
Velocity vectors, 737
Visual user interface, 729
Wall functions in turbulent flow, 744

EXAMPLES, WORKED AND DOCUMENTED

Boundary-layer flow, 439
Die flow, non-Newtonian, 617
Electroosmosis, 667, 673
Jet flow and mixing, 514
Lake flow, 376
Lubricated bearing, 454
Momentum diffusion, 307
Multiphysics, 667, 673
Obstructed duct, 514
Orifice plate, 508
Parallel-plate flow, 439
Porous-medium flow, 726
Screw extruder, 319
Turbulent flow, 508, 514

SPECIAL FEATURES, AS ILLUSTRATED IN THE EXAMPLES

Add materials window, 729, 732
Arrow positioning, 737
Arrows, appearance, 517, 671
Axes, spacing of scale, 739
Bézier polygon, 738, 739
Blank material, 455, 509
Blank model, 727
Boolean and partitions, 509, 516, 674, 732, 739
Boolean operations, 441
Boundary conditions, 734
Boundary-layer stretching, 516
Boundary-layer thickness adjustment, 516
Circle, drawing, 731, 755
Close curve (for polygon), 739
Color bar, 736
Color selection for contours, 379
Computer time, turbulent flow, 517
Convergence plot tab, 517
Coordinates entry method, 672
Cross-plot, 309, 323, 511
Cut line, 442
Cut-line 2D, 455, 511
Desktop layout of windows, 440
Dielectric constant, 667

- Dimensionless quantity, entering, 669
- Drawing complex shape, 738
- Electric equations, 669
- Electric insulation, 668
- Electric potential, 668
- Electric properties, 670
- Electrically conducting liquid, 667
- Element color, 510
- Equations being solved, view, 669, 670
- Expression Builder, in Settings window, 442, 510, 517
- Fillet corners, 674
- Graphics window, 729
- Import geometry, 619
- Inlet boundary condition, 441, 509, 670
- Interior boundaries, keep, 739
- Laminar-flow equations, 669
- Level labels, 323
- Line graph, 442, 455, 512
- Logarithm of expression, 511
- Material properties, 732
- Materials window, 729
- Mesh statistics, 516, 735
- Message/progress window, 729, 736
- Model Builder window, 729
- Model Wizard, 726
- Moving an image, 455
- Moving wall, 455
- Neutral flow condition, 674
- Non-Newtonian flow, 617
- No-slip boundary condition, 441
- Normal flow, 516
- Normal-flow boundary condition, 441, 516
- Normal stress, zero, 670
- Open boundary, 670
- Outlet boundary condition, 441, 455, 509, 516, 670
- Parameters, names, values, units, 731
- Parametric sweep, 510, 620
- Physics, selection, 727
- Point, pressure specified at, 320, 321
- Polygon, 454
- Polynomial smoothing, 324
- Porous medium, 733
- Progress button, 510
- Progress tab, 671
- Quality, for smoothing curve, 443
- Range function, 309, 310, 323
- Recover within domains, 324
- Rectangle, drawing, 731, 755
- Rectangular elements, 455
- Regular layout of windows, 440
- Relative permittivity, 667
- Scaling of dependent variables, 671
- Scaling options, 671
- Settings window, 730
- Sliding wall, 308
- Slip boundary condition, 441
- Smoothing a curve, 324
- Solver configurations node, 671
- Space dimension, select, 727
- Start-point controlled, 455, 510
- Stationary selection, 727
- Streamline positioning, 455, 517
- Streamline separation distance, 517
- Streamline start points, 672
- Streamlines, settings for, 442, 672, 674
- Streamlines, start and stop values, 674
- Suppress backflow boundary condition, 441, 455, 516, 670
- Syntax errors, 379
- Time-dependent selection, 728
- Transient analysis, 308
- Turbulent flow, 510
- Turbulent flow, $k-\epsilon$ method, 508, 509, 515, 516, 517
- Union, Boolean operation, 674
- Units for boundary condition, 379
- User-controlled mesh, 516
- Values, by clicking on a surface plot, 379, 736
- Viscosity, artificially high, 510
- Wall boundary condition, 441
- Wall functions, 509, 516
- Wall resolution plot, 517
- Within domains, graph smoothing, 324
- Zoom extents, 732, 739, 378
- Zoom in/out, box, 732
- Zoom to selection, 732